



MAIN FRAME ASSEMBLY WITH CHASSIS

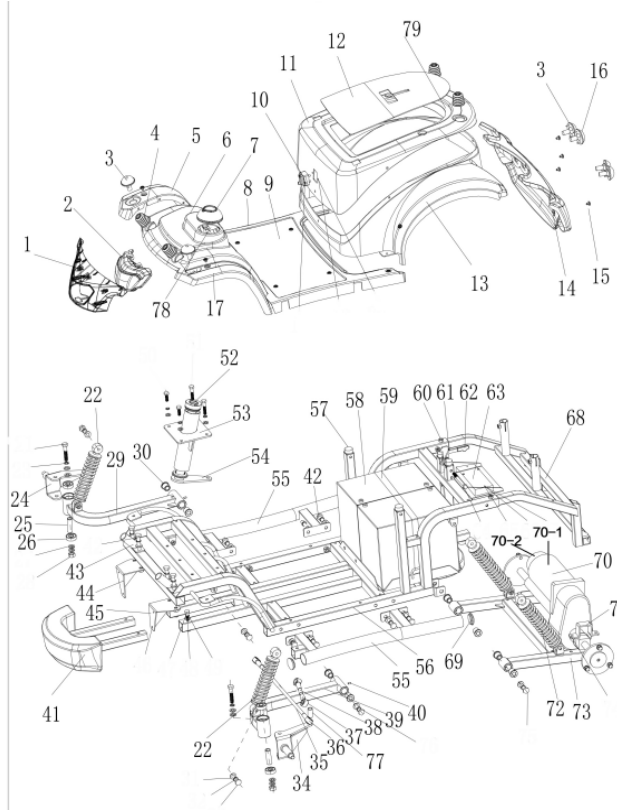

1-1	WFL46-16-2201	HEAD LIGHT FIXED COVER
1-2	WFL46-16-2102	HEAD LIGHT
1-3	WFL46-16-2503	TURNING LIGHT
1-4	WFL46-16-2304	RUBBER SLEEVE
1-5	WFL46-16-2205	FRONT FOOT STEP COVER LEFT
1-6	WFL46-16-2206	FRONT COVER
1-7	WFL46-16-2307	FRONT DUST PROVE PAD
1-8	WFL46-16-2208	PLASTIC FOOT STEP COVER
1-9	WFL46-16-2309	CENTER FOOT MAT
1-10	WFL46-16-2510	OVERLOAD PROTECTOR
1-11	WFL46-16-2211	MIDDLE REAR COVER
1-12	WFL46-16-2212	UPPER REAR COVER
1-13	WFL46-16-2213	BOTTOM REAR COVER
1-14	WFL46-16-2214	REAR BUMPER COVER
1-15	WFL46-16-2215	PLASTIC SCREW
1-16	WFL46-16-2516	REAR TURNING LIGHTS
1-17	WFL46-16-2217	FRONT FOOT STEP COVER RIGHT
1-22	WFL46-16-2122	SHOCK ABSORBER
1-24	WFL46-16-2124	FRONT WHEEL AXLE RIGHT
1-25	WFL46-16-2625	STEERING SHAFT SLEEVE
1-26	WFL46-560101	BEARING
1-29	WFL46-16-2129	FRONT ROCKING ARM (RIGHT)
1-30	WFL46-16-2630	COPPER PIPE


1-34	WFL46-16-2134	FRONT WHEEL AXLE LEFT
1-35	WFL46-16-2135	TURNING ROD B
1-36	WFL46-16-2136	POSITIVE TEETH BALL HEAD
1-37	WFL46-16-2137	NEGITIVE BALL HEAD
1-38	WFL46-16-2138	TURNING ROD A
1-39	WFL46-16-2139	ROCKING ARM (LEFT)
1-40	WFL46-16-2140	OIL NOZZLE
1-41	WFL46-16-2141	FRONT BMPER
1-43	WFL46-16-2143	FRONT WINDOW CONNECTION PIPE TO THE FRAME
1-44	WFL46-16-2144	HEAD LIGHT FIXED PLATE(RIGHT)
1-45	WFL46-16-2145	HEAD LIGHT FIXED PLATE(LEFT)
1-52	WFL46-16-2152	BEARING SETS
1-53	WFL46-16-2153	PRIOR PIPE
1-54	WFL46-16-2154	TURNING AXLE
1-55	WFL46-16-2155	SIDE BUMPER
1-56	WFL46-16-2156	FRONT FRAME
1-57	WFL46-16-2357	RUBBER CAP
1-58	WFL46-16-2358	LITHIUM BATTERY100A (ALBATROSS)
1-59	WFL46-16-2359	CHARGER FOR LITHIUM (ALBATROSS)
1-58	WFL48-2-7	LEAD ACID BATTERY 70A (EMPEROR)
1-59	WFL46-050951	CHARGER 8A (EMPEROR)
1-60	WFL46-16-2858	BATTERY FIXED BELT
1-61	WFL46-16-2161	SEAT HOOK
1-62	WFL46-16-2662	SPRING
1-63	WFL46-16-2563	CONTROLLER
1-68	WFL46-16-2168	REAR FRAME
1-69	WFL46-16-2269	ROUND CAP
1-70	WFL46-16-3171	GEARBOX
1-70-1	WFL46-16-3171A	MOTOR
1-70-2	WFL46-16-3171B	ELECTROMAGNETIC BRAKE
1-71	WFL46-16-3170	MOTOR FIXED BED
1-72	WFL46-16-3172	SHOCK ABSORBER
1-73	WFL46-16-3173	GEAR BOX FIXED FRAME
1-77	WFL46-16-2177	TUBE
1-78	WFL46-16-2178	CEGARRET LIGHTER
1-79	WFL46-16-2179	STICKER PAD
		
	80	81
1-80	WFL43-4-190101	TURNING SENSOR
1-81	WFYJPM	LCD SETS
1-82	WFL48-800W-17	HAND BRAKE SET

STEERING HANDLE ASSEMBLY

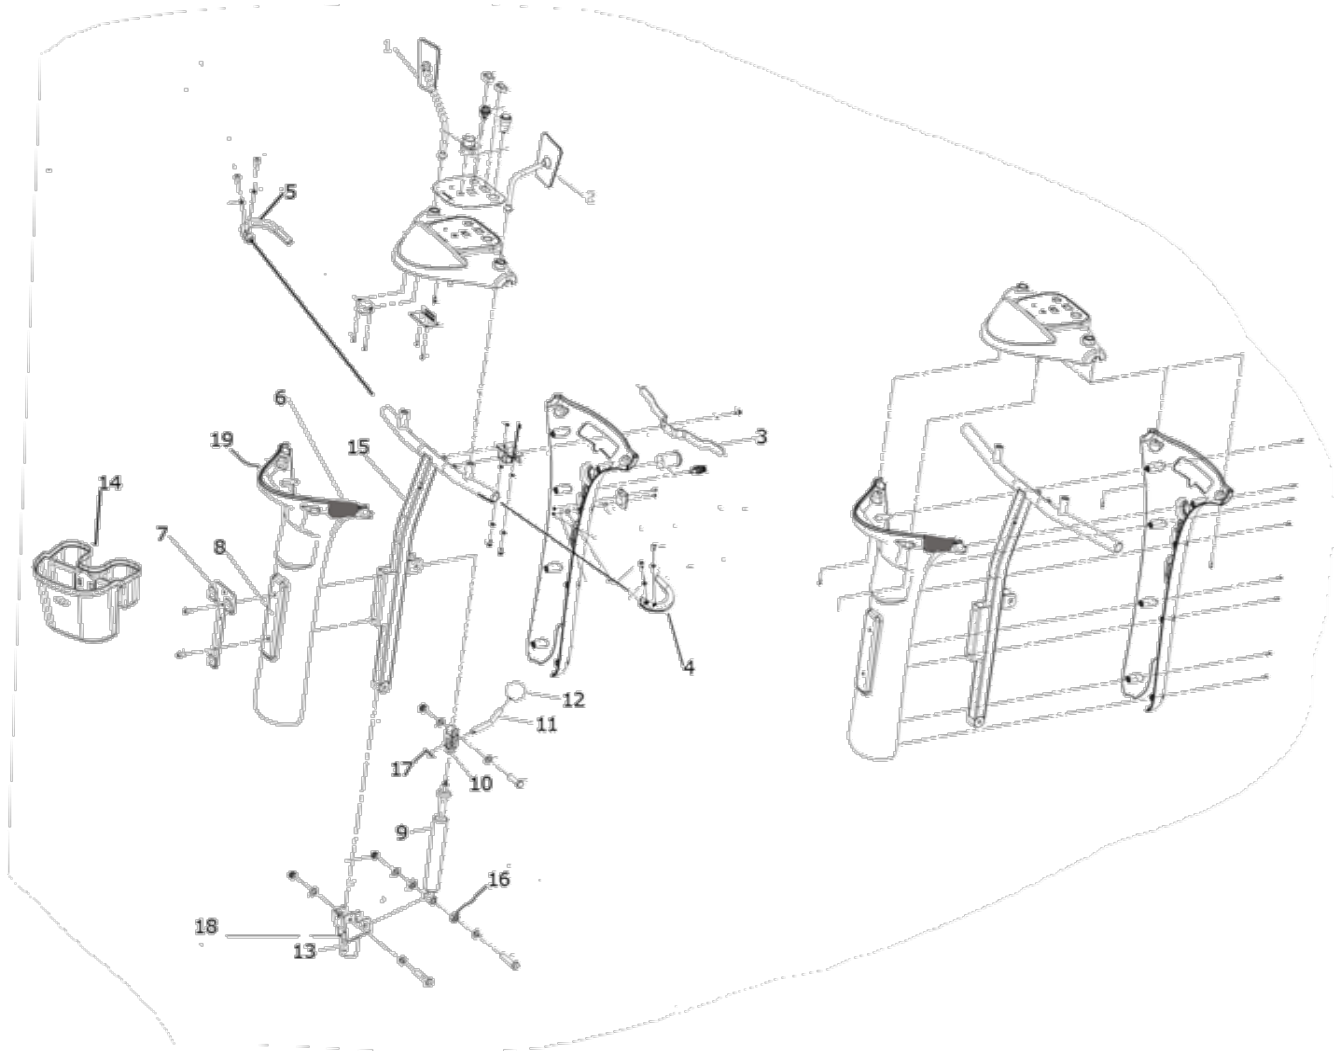


2-1	WFL42-160101 R	REAR VIEW MIRROR (RIGHT)
2-2	WFL42-160101 L	REAR VIEW MIRROR (LEFT)
2-3	WFL42-121901	SPEED CONTROL LEVER
2-4	WFL42-123401	STEERING HANDLE FOAM COVER
2-5	WFL42-124701	STEERING HANDLE COVER RIGHT
2-6	WFL42-135601	RUBBER PAD ON FRONT STEERING HANDLE COVER
2-7	WFL42-163001	BASKET HANGER
2-8	WFL42-195501	RUBBER PAD UNDER BASKET HANGER
2-9	WFL42-154401	CONTROLLABLE GAS SPRING
2-10	WFL42-163701	AIR SPRING JOINT SHAFT
2-11	WFL42-163601	HEAD ANGLE ADJUSTING HANDLE
2-12	WFL42-123501	HEAD ANGLE ADJUSTING HANDLE BALL
2-13	WFL42-164501	FOLDER ASSEMBLY
2-14	WFL42-124801	FRONT BASKET
2-15	WFL42-162801	STEERING HANDLE FRAME
2-16	WFL42-166101	GAS SPRING FIX BED
2-17	WFL42-163801	COTTER PIN
2-18	WFL42-166001	CARD PIN
2-19	WFL42-122901	STEERING HANDLE FRONT COVER

HEAD COVER ASSEMBLY

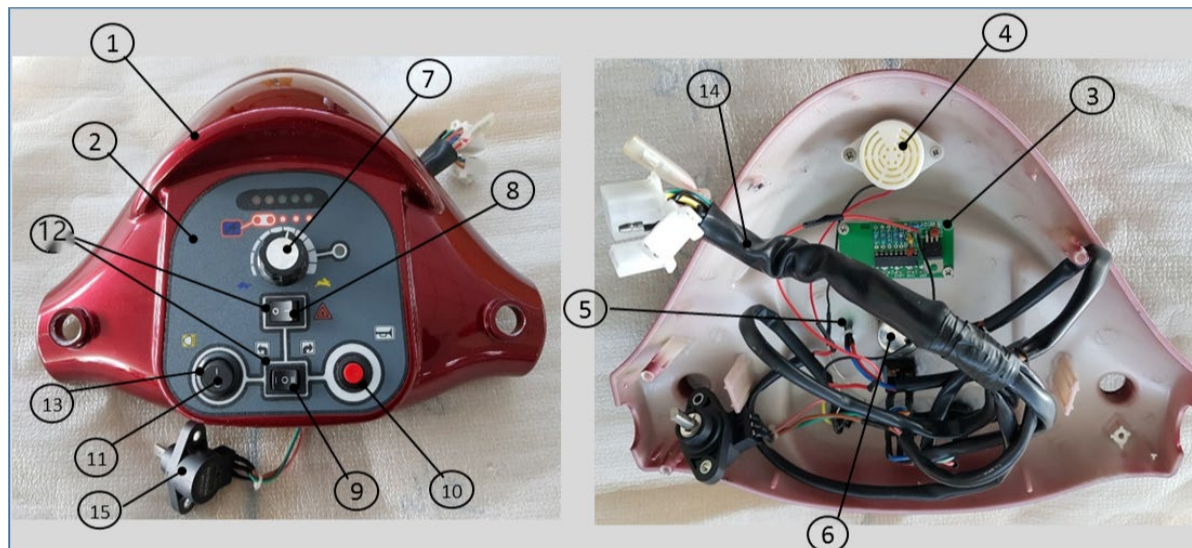


3-1	WFL42-121001	STEERING HANDLE HEAD COVER
3-2	WFL42-190901	PANEL IP FILM
3-3	WFL42-151401	BATTERY INDICATOR
3-4	WFL42-151101	ELECTRONIC BUZZER
3-5	WFL42-151301	FAILURE INDICATOR
3-6	WFL42-150801	100K VARIABLE RESISTOR(With Flat, Spring, Nut)100A
3-7	WFL42-150701	SPEED CONTROL KNOB(With Set Screw)
3-8	WFL42-150301	DOUBLE FLASH SWITCH
3-9	WFL42-150401	TURNING LIGHT SWITCH
3-10	WFL42-150501	HORN SWITCH
3-11	WFL42-150601	HEAD LIGHT SWITCH (LED)
3-12	WFL42-135001	WATER PROOF COVER - A
3-13	WFL42-135101	WATER PROOF COVER - B
3-14	WFL42-135201	HEAD WIRING ASSY
3-15	WFL42-150801	VARIABLE RESISTANCE (5KΩ) 5K

STEERING HANDLE REAR COVER ASSEMBLY

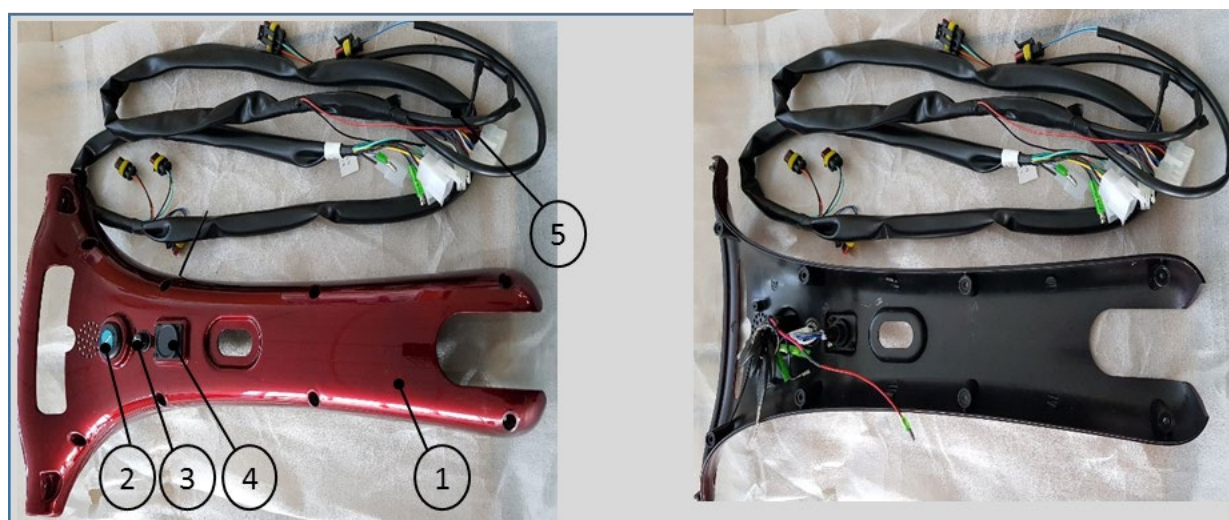

4-1	WFL42-123201	STEERING HANDLE COVER REAR
4-2	WFL42-152201	KEY SWITCH
4-3	WFL42-152101	FUSE SOCKET
4-4	WFL42-152401	CHARGER SOCKET
4-5	WFL42-155401	MAIN WIRE ASSY

FRONT WHEEL ASSEMBLY

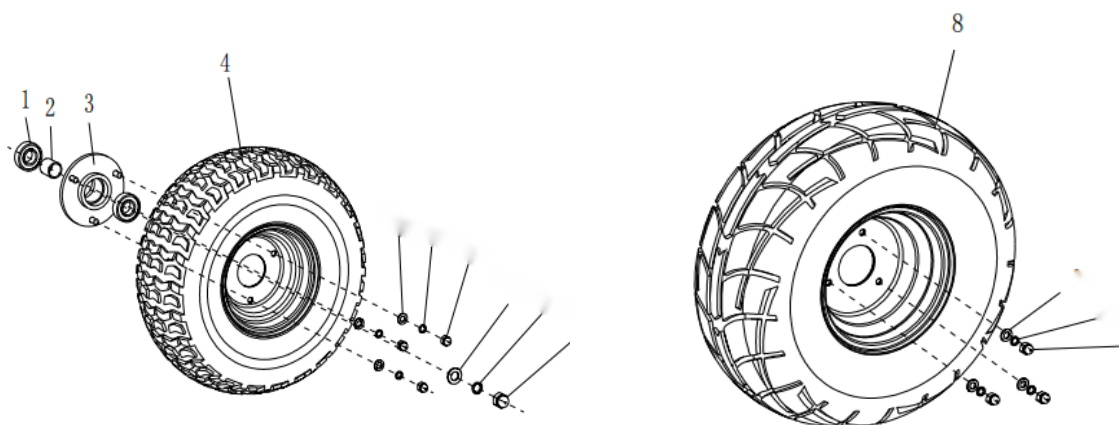

9


11

10

12

5-1	WF6004-2Z	BEARING
5-2	WFL46-16-5102	FRONT WHEEL TUBE
5-3	WFL46-16-5103	FRONT WHEEL CONNECTOR
5-9	WFL42-010920	FRONT TIRE (EMPEROR)
5-10	WFL48-220113	REAR TIRE (EMPEROR)
5-11	WFL48-220112	FRONT WHEEL ALUMINIUM RIM (EMPEROR)
5-12	WFL48-220116	FRONT TIRE CONNECTOR (EMPEROR)
5-13	WFL48-L-220117-01	REAR TIRE CONNECTOR LEF (EMPEROR)
5-14	WFL48-L-220117-01	REAR TIRE CONNECTOR RIGHT (EMPEROR)
5-4	WFL46-16-5104	FRONT TIRE (ALBATROSS)
5-8	WFL46-16-5108	REAR TIRE (ALBATROSS)
5-6	WFL46-16-5109	WHEEL ALUMINIUM RIM (ALBATROSS)

SEAT ASSEMBLY

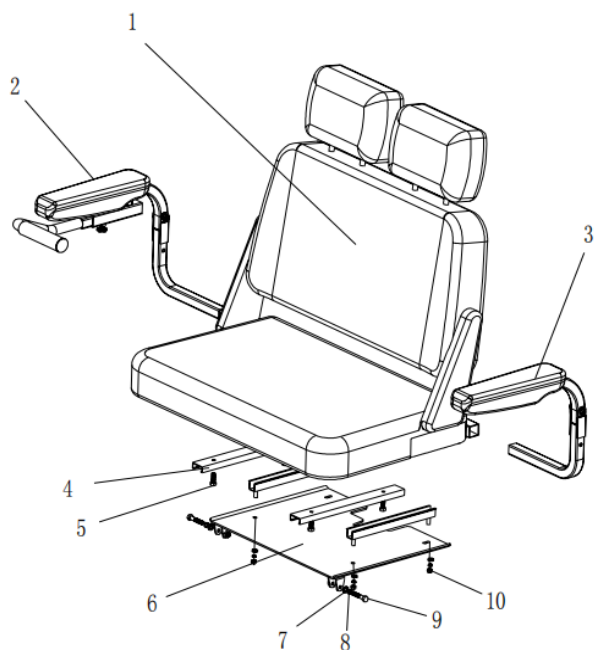

6-1	WFL42-410101	SINGLE SEAT (ALBATROSS)
6-1	WFL46-16-4101	SINGLE WIDE SEAT FOR (EMPEROR)
6-2	WFL46-16-4102	HAND REST RIGHT
6-3	WFL46-16-4103	HAND REST LEFT
6-4	WFL46-16-4104	SLIDING RAIL
6-5	WFL46-16-4105	SCREW
6-6	WFL46-16-4106	SEAT FIXED BED

This exploded perspective view illustrates the assembly of a vehicle seat. The main components are labeled with numbers 1 through 34. The seat backrest (1) is shown with its internal frame (2, 3) and is connected to the seat base (4) via hinges (5, 6, 7, 8, 9, 10, 11, 12, 13). The seat base (4) is shown with its internal frame (14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34) and is connected to the seat cushion (12) via hinges (13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34). The seat cushion (12) is shown with its internal frame (12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34) and is connected to the seat base (4) via hinges (13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34). The seat backrest (1) is shown with its internal frame (2, 3) and is connected to the seat base (4) via hinges (5, 6, 7, 8, 9, 10, 11, 12, 13). The seat base (4) is shown with its internal frame (14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34) and is connected to the seat cushion (12) via hinges (13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34). The seat cushion (12) is shown with its internal frame (12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34) and is connected to the seat base (4) via hinges (13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34).

7-1	WFL46-16-6201	CANOPY
7-2		RUBBER PAD
7-3	WFL46-16-6203	PLASTIC SCREW
7-4	WFL46-16-6104	CANOPY UPPER FRAME
7-9	WFL46-16-6109	CANOPY MIDDLE FRAME
7-11	WFL46-16-6111	REAR BASKET FIXED BRAKET
7-12	WFL46-150701	REAR BASKET
7-13	WFL46-16-6113	CANOPY BOTTOM FRAME
7-15	WFL46-16-6115	CANOPY REAR VIEW MIRROR(RIGHT)
7-31	WFL46-16-6115	CANOPY REAR VIEW MIRROR
7-17	WFL46-16-6217	L46 FRONT WINDOW GLASS AND CONNECTOR
7-35	WFL46-16-6235	REAR BOX
7-47	WFL46-16-6147	REAR BOX FIX PIPE