

Dealer Bulletin # DB2024-07

Mustang Pro LCD Settings



6.2" LCD Setting Instructions

Press and hold the settings/black button for 3 seconds to enter the settings interface. Factory setting code "111111". **Users are not advised to change the factory settings.**

SCOOTER SETTINGS

	SCOOTER		SETTING INSTRUCTIONS
1-1	Freewheel Setting	Click/Long Press	Press and hold the setting button, enter scooter settings, enter freewheel settings, click or long press mode. 1. Click freewheel button once, enter freewheel mode, gears show N, click freewheel mode button again, it will go to driving mode, gears will show P 2. Press freewheel button and hold it, it goes to freewheel mode, gear shows N, release the button, it goes to driving mode, gear shows P.
1-2	Unit Setting	Metric System/British System	Press and hold the setting button, enter settings – vehicle settings, select metric or imperial options, press setting/back button to return to main interface.
1-3	Reverse Alarm	Open/Close	Press and hold settings/back button. Enter settings menu – vehicle settings – reverse alarm sound type – select open/close – press OK to save settings – press settings/back to return to main interfaced
1-4	Reverse Alarm Type	Stereo/Buzzer	Press and hold settings/back button. Enter settings menu – vehicle settings – reverse alarm sound type – use arrow key to switch options buzzer/stereo – press OK to save settings – When it is set to on, there will be a prompt sound to the effect of the buzzer, select reverse warning sound to the effect of a stereo alarm sound.
1-5	Turning Alarm	Open/Close	Press and hold the settings/back button to enter setting interface, use arrow key to switch to prompt sound setting of turning light, select the options open/close and press OK button to save setting. When it is set to on, there will be prompt sound when turning on the turning light, when set to off, there will be no prompt sound when turning on the turning light.
1-6	Turning Alarm Type	Stereo/Buzzer	Press and hold the settings/back button to enter to setting menu, use arrow key to vehicle settings, turning alarm type setting, select relative alarm type buzzer/stereo and press OK to save setting. Effect of buzzer prompt sound, effect of stereo prompt sound, press setting/back to return to the main interface.
1-7	Brake Lamp Setting	Open/Close	Press and hold the settings/back button to the setting menu, entering vehicle setting, brake light setting, select on/off, and press ok button to save setting, when it is set to on, brake lights will be highlighted when decelerating or braking, when it is set to off, there will be no change of the brake lights when decelerating or braking, press setting/back to return to the main interface
1-8	Parking Lamp Setting	Open/Close	Press and hold the settings/back button to the setting menu, use arrow key to vehicle settings, parking light setting, select turn on or turn off of parking light function, press ok to save settings, when it is set to on of parking light, parking light will keep highlighted when scooter stops, when it is set to off, parking light keeps off when the scooter stops, press setting/back to return to the main interface
1-9	Charging Sleep Setting	Open/Close	Press and hold settings/back button to the setting menu, use arrow key to vehicle setting, charging sleep setting, select close/open about charging sleep function, press ok to save the setting, when charging sleep is set to on ,screen will be off when scooter is charging, when charging sleep is set to off, charging logo on the screen is on when it's charging, press setting/back to return to the main interface
1-10	Atmosphere Lamp Setting	Automatic/Manual	Press and hold the settings/back button to the setting menu, use arrow key to vehicle setting, atmosphere lamp setting, select automatic or manual, press ok to save settings, press setting/back to return to the main interface
1-11	Fault Alarm Setting	Open/Close	Press and hold the settings/back to the setting menu, use arrow key to vehicle settings, fault alarm setting, select on/off, press ok to save settings, press setting/back to return to the main interface
1-12	Fault Alarm Type	Stereo/Buzzer	Press and hold the settings/back to the setting menu, entering vehicle settings, fault alarm type setting, select stereo or buzzer, press ok to save setting, press setting/back to return to the main interface
1-13	Follow Me Home		Press and hold the settings/back to the setting menu, entering vehicle settings, follow me home settings, select delay time (1~30S) for the headlight being off, selecting number 0 means to turn off this function, press OK to save the settings, press setting/back to return to the main interface
1-14	No video While Driving	Open/Close	Press and hold the settings/back to the setting menu, entering vehicle settings, no video while driving settings, select on/off, press OK to save the setting, press setting/back to return to the main interface
1-15	Parking Sensor Delay		Press and hold the settings/back to the setting menu, entering vehicle settings, parking sensor delay setting, select requested time, press OK to save the setting, press setting/back to return to the main interface
1-16	Auto Sleep Setting		Press and hold the settings/back to the setting menu, entering vehicle settings, auto sleep setting, select requested time, press OK to save the setting, press setting/back to return to the

Dealer Bulletin # DB2024-07

Mustang Pro LCD Settings



			main interface
1-17	Buzzer Volume	High/Medium/Low	Press and hold the settings/back to the setting menu, entering vehicle settings, buzzer volume setting, select high/medium/low and press OK to save the setting, press setting/back to return to the main interface
1-18	Reverse Automatic Flashing	Open/Close	Press and hold the settings/back to the setting menu, entering vehicle settings, click reversing alarm, select close/open and press OK to save the setting. Press setting/back button to return to the main interface
1-19	GPS Setting	Open/Close	Press and hold the settings/back to the setting menu, entering vehicle settings, GPS setting, select close/open and press OK to save the setting, press setting/back to return to the main interface.

SYSTEM SETTINGS

2-1	Display Setting		Press and hold the Settings/Back button to enter the settings interface, entering system setting, display setting, press setting/back to return to the main interface
2-1-1	Daytime Brightness Setting		Press and hold the Settings/Back button to enter the settings interface, entering system setting, display setting, daytime brightness setting, select from 1~10, press OK to save the settings, press setting/back to return to the main interface
2-1-2	Night Brightness Setting		Press and hold the Settings/Back button to enter the settings interface, entering system setting, display setting, daytime brightness setting, select from 1~10, press OK to save the settings, press setting/back to return to the main interface
2-1-3	Language Setting		Press and hold the Settings/Back button to enter the settings interface, entering system setting, display setting, language setting, select the language you need, press OK to save the settings, press setting/back to return to the main interface
2-1-4	Startup Animation Setting	Open/Close	Press and hold the Settings/Back button to enter the settings interface-Enter the system setting-display setting-startup animation setting-select startup animation open/close-press OK to save the setting-press Settings/Back button to return main interface-effect of closing the startup animation-effect of open startup animation
2-1-5	Theme Setting	Theme 1/Theme2	Press and hold the Settings/Back button to enter the settings interface-Enter the system setting-display setting-theme setting-select the theme-press OK button to confirm
2-1-6	LOGO Setting	Open/Close	Press and hold the Settings/Back button to enter the settings interface-Enter the system setting-display setting-logo setting-select open/close
2-2	Sound Setting		Press and hold the Settings/Back button to enter the settings interface-Enter the system setting-sound setting-press OK button to confirm-press setting/back to return to the main interface
2-2-1	System Volume		Press and hold the Settings/Back button to enter the settings interface-Enter the system setting-sound setting-system volume-select requested volume-press OK button to confirm-press setting/back to return to the main interface
2-2-2	Bluetooth Phone Volume		Press and hold the Settings/Back button to enter the settings interface-Enter the system setting-sound setting-Bluetooth phone-select requested volume-press OK button to confirm-press setting/back to return to the main interface
2-2-3	Button Tone Volume		Press and hold the Settings/Back button to enter the settings interface-Enter the system setting-sound setting-button tone-select requested volume press OK button to confirm-press setting/back to return to the main interface
2-2-4	Multimedia Sound Effects	Standard/Jazz/Base/Rock/Popular	Press and hold the Settings/Back button to enter the settings interface-Enter the system setting-sound setting-multimedia sound-select requested sound-press OK button to confirm-press setting/back to return to the main interface
2-3	Bluetooth Setting	Open/Close	Press and hold the Settings/Back button to enter the settings interface-Enter the system setting-Bluetooth setting-select open/close-press OK button to confirm-press setting/back to return to the main interface
2-4	Local Setting		Press and hold the Settings/Back button to enter the settings interface-local setting-press OK button to confirm-press setting/back to return to the main interface
2-4-1	About This Mac		Press and hold the Settings/Back button to enter the settings interface-local setting-about this mac-press OK button to confirm-press setting/back to return to the main interface
2-4-2-1	Time & Date Setting	Year/Month/Day/Hour/Minute	Press and hold the Settings/Back button to enter the settings interface-local setting-time and date-select year/month/day/hour/minute-press OK button to confirm-press setting/back to return to the main interface
2-4-3	Restore Factory Setting	Confirm	Press and hold the Settings/Back button to enter the settings interface-local setting-restore factory setting-press OK button to confirm-press setting/back to return to the main interface

Dealer Bulletin # DB2024-07

Mustang Pro LCD Settings



Factory Settings

3	Factory Settings		Press and hold the Settings/Back button to enter the settings interface-factory setting-press OK button to confirm-press setting/back to return to the main interface
3-1	Wheel Setting		Press and hold the Settings/Back button to enter the settings interface-factory setting-input factory setting code-select wheel diameter-press Ok to confirm-press setting/back to return to the main interface
3-2	Speed Mode	Reed Switch/Voltage	Press and hold the Settings/Back button to enter the settings interface-factory setting-speed mode--select reed switch/voltage-press Ok to confirm-press setting/back to return to the main interface
3-3	Power Display Mode		Press and hold the Settings/Back button to enter the settings interface-factory setting-power display mode-select direct measurement/read the controller--press Ok to confirm-press setting/back to return to the main interface
3-4	Power Display Setting		Press and hold the Settings/Back button to enter the settings interface-factory setting-power display setting-select 1~10-press Ok to confirm-press setting/back to return to the main interface
3-5	Electricity Filtering		Press and hold the Settings/Back button to enter the settings interface-factory setting-electricity filtering-select 1~50-press Ok to confirm-press setting/back to return to the main interface
3-6	Speed Compensation		Press and hold the Settings/Back button to enter the settings interface-factory setting-speed compensation-select 1~99-press Ok to confirm-press setting/back to return to the main interface
3-7	Controller Type Setting	PG-LED/ PG-trucharge/Dynamic	Press and hold the Settings/Back button to enter the settings interface-factory setting-controller type setting-select PG-LED/PG-TRUCHARGE/DYNAMIC-press Ok to confirm-press setting/back to return to the main interface
3-8	Maintenance Setting		Press and hold the Settings/Back button to enter the settings interface-factory setting-maintenance setting-select time 1~12-press Ok to confirm-press setting/back to return to the main interface
3-9	Maintenance Resetting	Confirm	Press and hold the Settings/Back button to enter the settings interface-factory setting-maintenance reset-confirm-press OK to confirm-press setting/back to return to the main interface
3-10	High Beam Setting	Close/Open	Press and hold the Settings/Back button to enter the settings interface-factory setting-high beam setting-select open/close-press OK to confirm-press setting/back to return to the main interface (when selecting open, click headlight button once to be dipped headlight, click it again, it turns to be high beam, press headlight button and hold it to turn headlight off)

Dealer Bulletin # DB2024-07
Mustang Pro LCD Settings

