

Dealer Service Bulletin #110

LCD Operation Instruction – Emperor-Phantom-Albatross

Factory mode/accumulate range return to 0.

- 1) Press mode button + set button at the same time to set to factory mode.
- 2) Under factory mode, press mode button to set the tyre diameter option, next press the left turning button to increase the number, and right turning button to decrease the number.
The range is 10 – 99.
- 3) After the diameter is set, press the mode button to switch to unit setting, press left turning light button and right turning light button to switch units.
- 4) After the above two are set, press the head light button for more than 3 seconds, the accumulate range of kilometers will return to 0.

When the setting is finished, press mode button to return to factory mode.



Clock Setting

- Turn on the key switch, press mode button to come into the clock setting mode. Firstly you can fix on the hour number by pressing mode button to increase number, and then press the mode button to fix on the minute number.
- When the setting is fixed, press mode button to save and exit.

Speed Adjusting Setting

- Refer to the speed, firstly, please press the mode and setting button at the same time and ask another person to turn on the key switch and then release the button. There will be numbers on the screen, adjust it by pressing the left and right button until the number is 32.
If the speed showed on the LCD is higher than actual speed, fix the number smaller.
If the speed showed on the LCD is lower than actual speed, fix the number bigger.

If the Speedo doesn't work, you will need to find the speed sensor on the right rear wheel and unlock the screw of sensor without the wire a little outside (far from) or inside (near to) another piece with wire.