


Dealer Service Bulletin #DSB142

Bandit Battery Voltage Test

Picture of the bottom side of the battery box

Negative Terminal

Positive Terminal

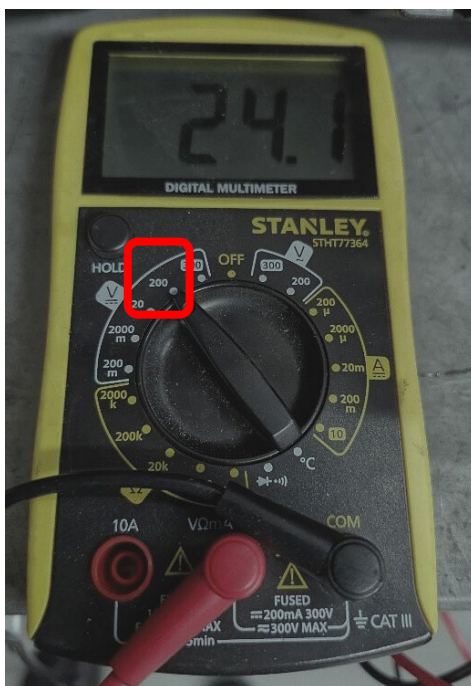

Voltage Meter should be set to 200V.
Connect to Positive & Negative terminals
to obtain reading.