

Dealer Service Bulletin #161

Dash Fault Codes

Emperor-Phantom-Albatross-Outlaw



Beep Fault Codes – Connection Issues.

1 Bar	The battery needs charging or there is a bad connection to the battery. Check the connections to the battery. If the connections are good, try charging the battery.
2 Bars	There is a bad connection to the motor. Check all connections between the motor and the controller.
3 Bars	The motor has a short circuit to a battery connection. Contact your service agent.
4 Bars	The freewheel switch is activated, or the manual brake disengagement mechanism is operated. Check the position of the switch or lever.
5 Bars	
6 Bars	The S-Drive is being inhibited for driving. Inhibit 2 is active. This may be because the battery charger is connected, or the seat is not in the driving position.
7 Bars	A throttle fault is indicated. Make sure that the throttle is in the rest position before switching on the scooter.
8 Bars	A controller fault is indicated. Make sure that all connections are secure.
9 Bars	The parking brakes have a bad connection. Check the parking brake and motor connection. Make sure the controller connections are secure.
10 Bars	An excessive voltage has been applied to the controller. This is usually caused by a poor battery connection. Check the battery connections.