



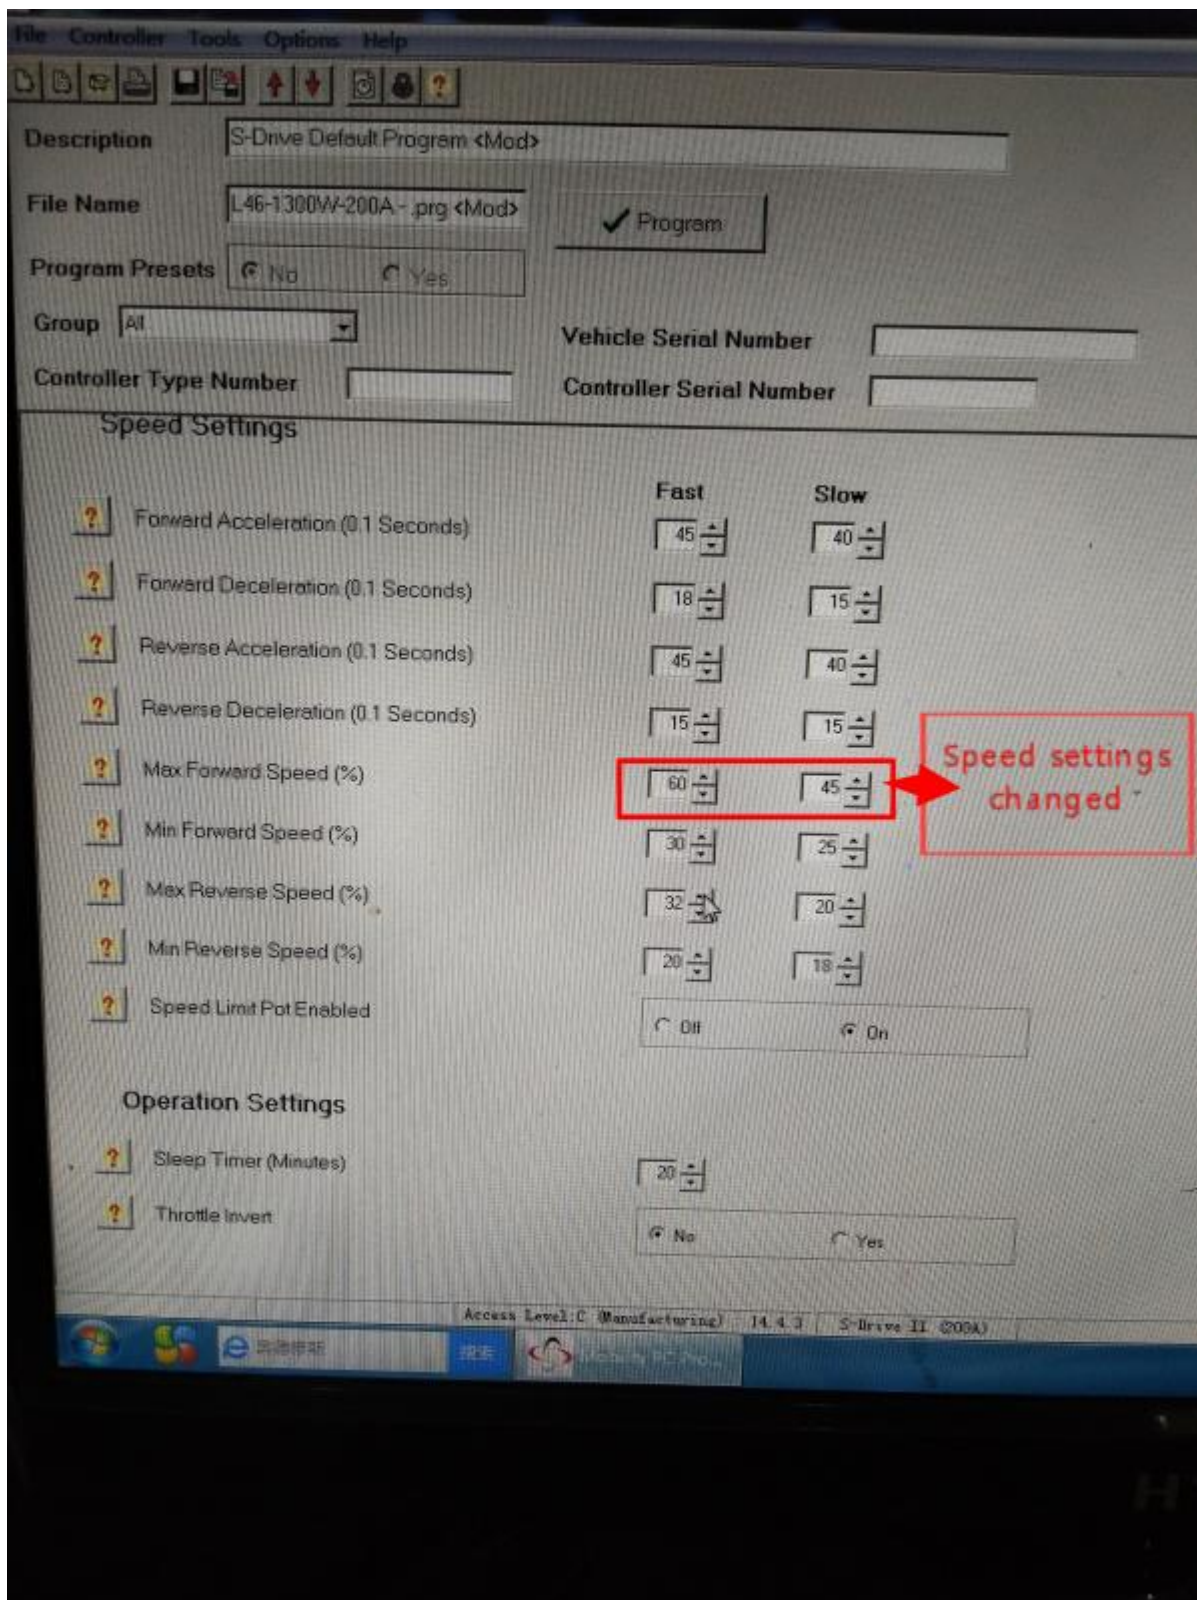

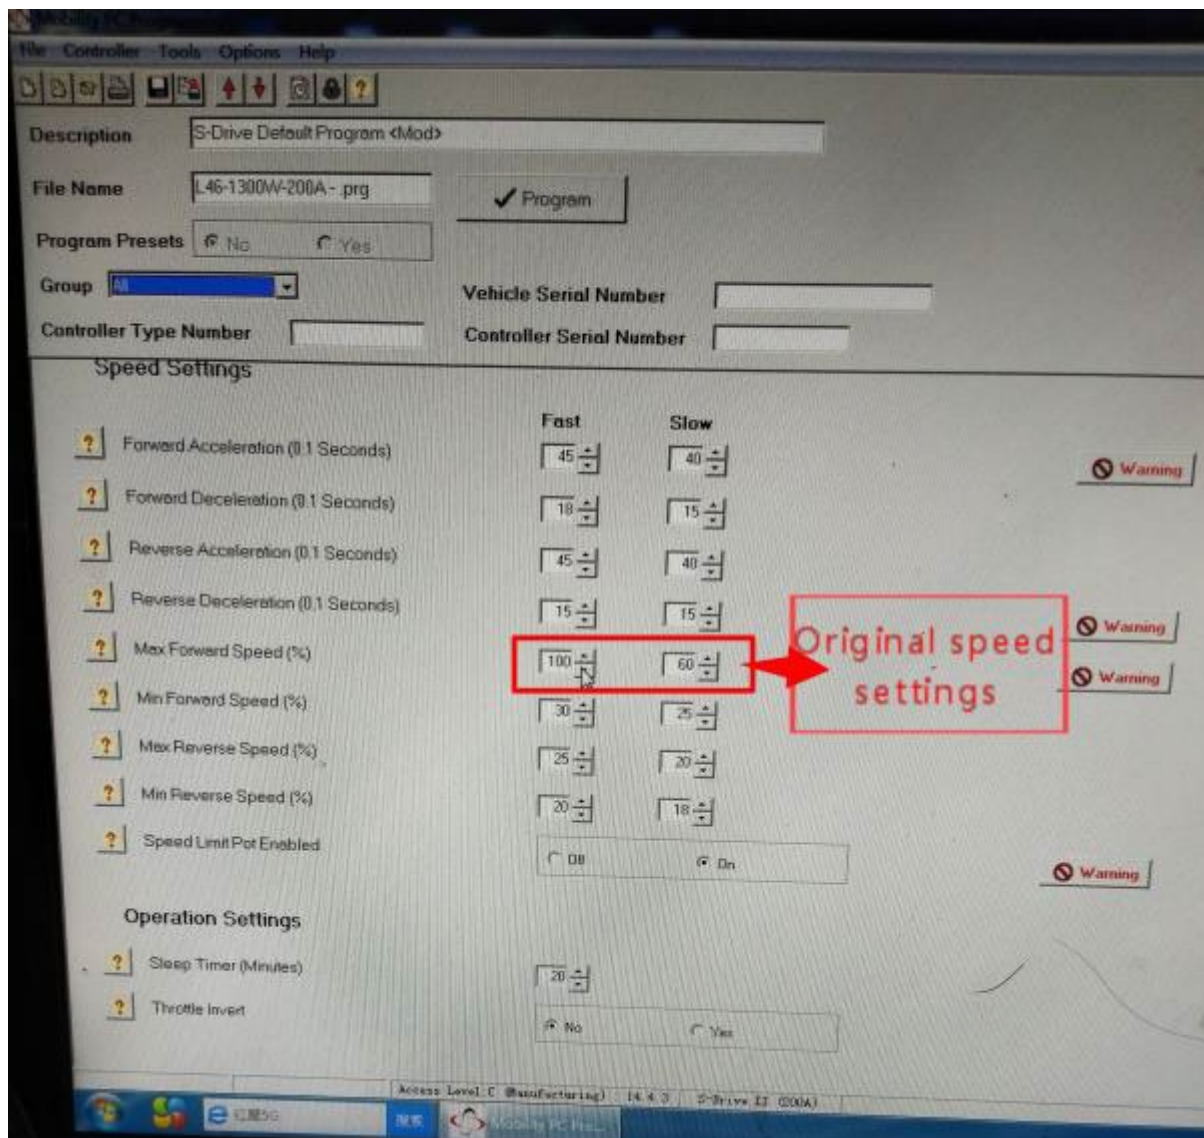

NB: There is no connector shown at the end of the video attachment. What you need to do is plug the programming connector to the four pin connector on the controller