




BLAZER

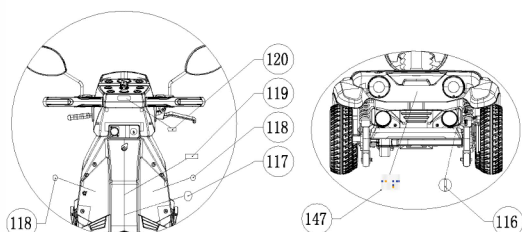




贴纸示意图

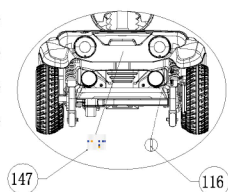


贴纸示意图

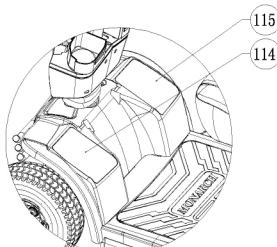

左右防滑贴纸

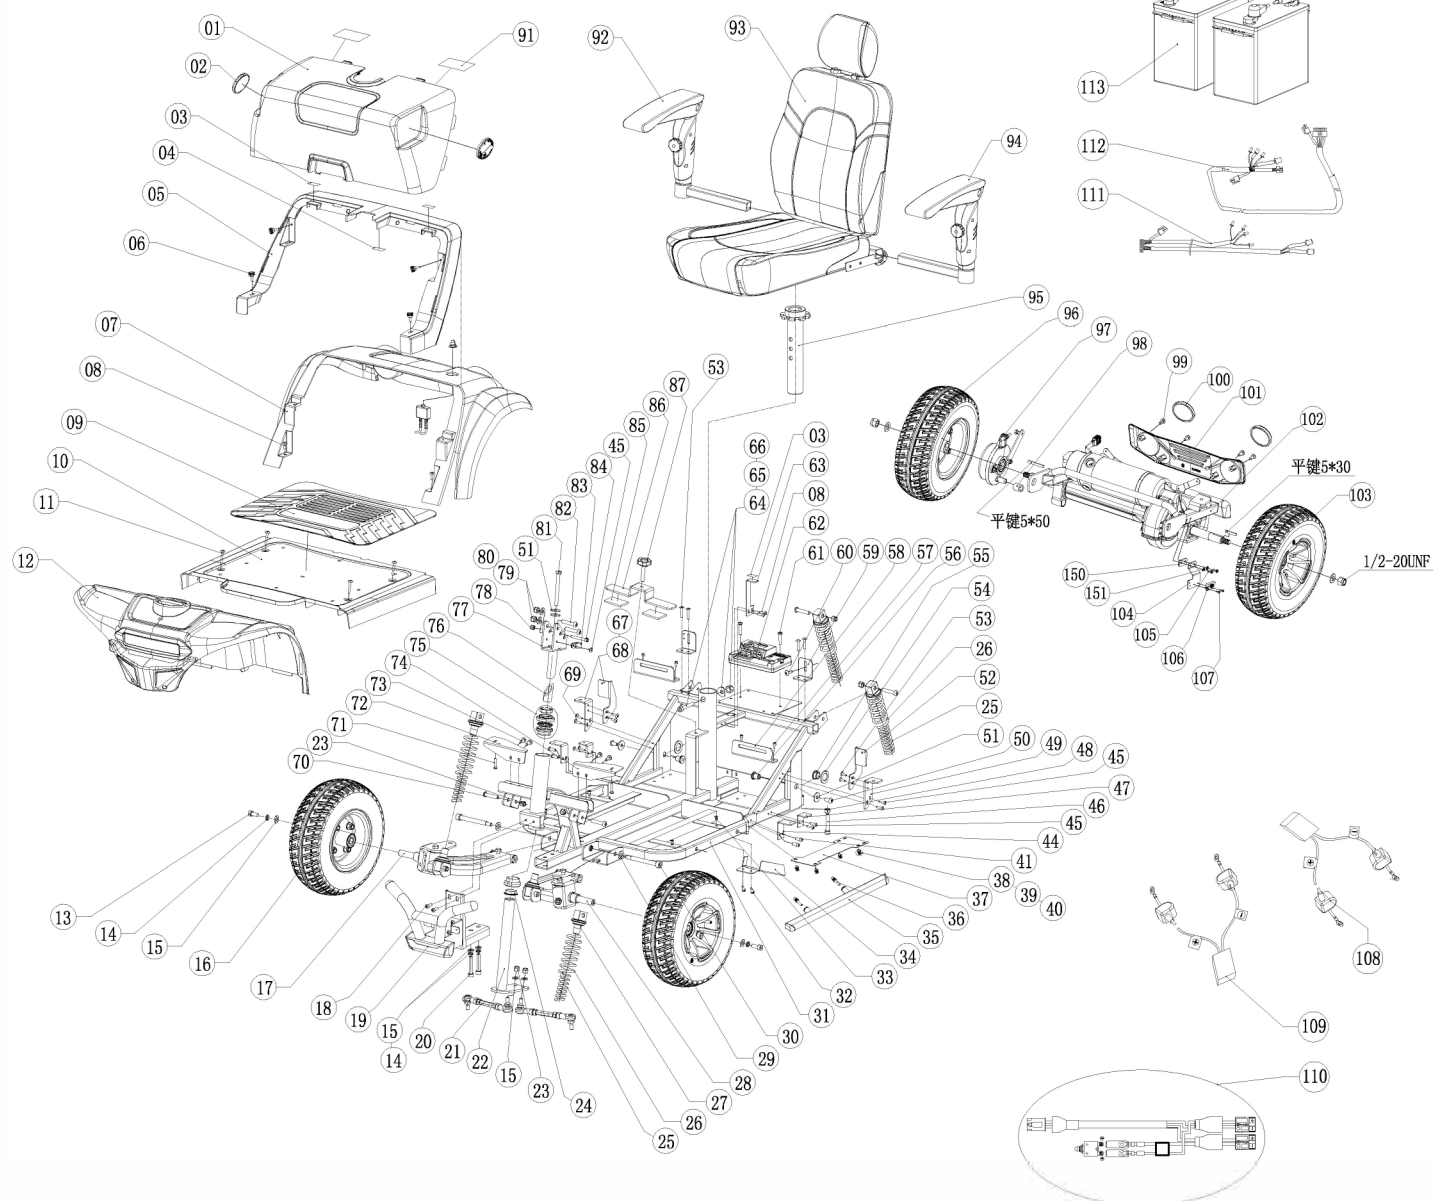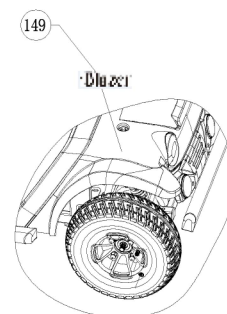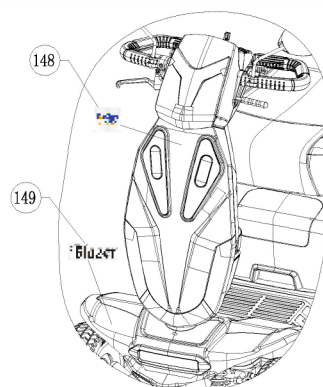

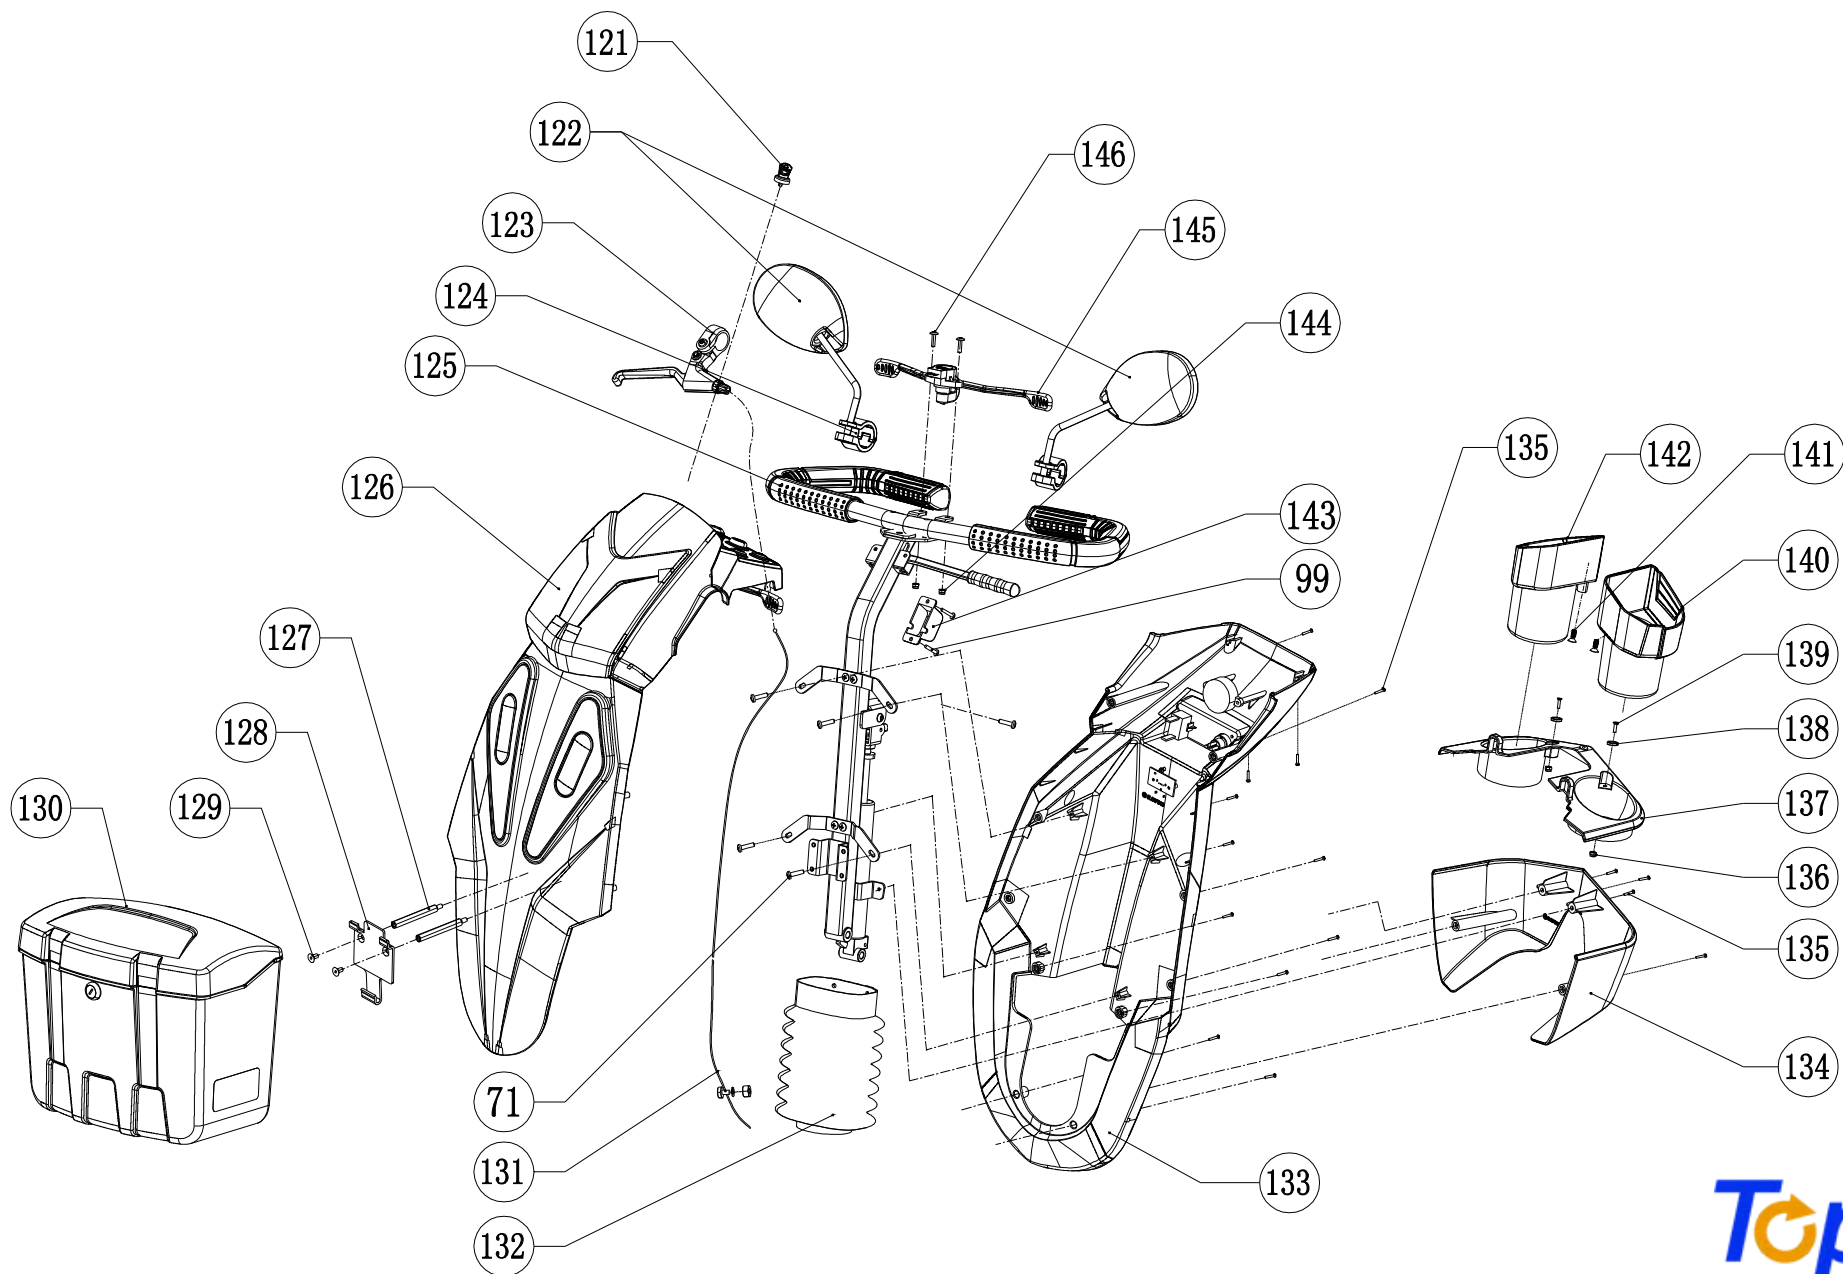

Model	LOC	Part #	Description
BLAZER	1	QLSL09P503A3A	Battery top cover
BLAZER	2	QLSL09A501B9C	Side reflector with E-Mark(Yellow)
BLAZER	5	QLSL09P505B19	Battery rear decoration skirt cover(Silver 643C)
BLAZER	6	QLSL09P182A00	Screw
BLAZER	7	QLSL09E504AK4	N/A
BLAZER	7-1	QLSL09P509B25	Battery rear cover only(Purple 519C)
BLAZER	7-1	QLSL09P509B07	Battery rear cover only(White CoolGray1C)
BLAZER	7-1	QLSL09P509B18	Battery rear cover only(Green 354C)
BLAZER	7-1	QLSL09P509B01	Battery rear cover only(Red 207C)
BLAZER	7-2	QLSF03F612AK0	Taillight assembly with turning light
BLAZER	9	QLSJ04P529A8A	Floor mat
BLAZER	10	QLSL09P511A19	Center deck(Silver 643C)
BLAZER	12	QLSL09E502AK4	N/A
BLAZER	12-1	QLSL09P501A25	Front deck only(Purple 519C)
BLAZER	12-1	QLSL09P501A07	Front deck only(White CoolGray1C)
BLAZER	12-1	QLSL09P501A18	Front deck only(Green 354C)
BLAZER	12-1	QLSL09P501A01	Front deck only(Red 207C)
BLAZER	12-2	QLSL09P504A19	Front face decoration cover(Silver 643C)
BLAZER	12-3	QLSK09F617AK0	Headlight assembly
BLAZER	12-4	QLSL09P507AG1	Headlight reflecting base(Silver)
BLAZER	12-5	QLSL09P506A4P	Headlight cover(Transparent)
BLAZER	16	QLSL09E210AK0	Front wheel assembly(air,12")
BLAZER	16-1	QLSL09A209AG0	Front hub
BLAZER	16-2	QLSJ07P256AB4	Outer tire for 12"
BLAZER	16-3	QLSJ07P257AB4	Inner tube for 12"
BLAZER	16-4	QLSK09P234AH0	Outside AL mag
BLAZER	16-5	QLSK09P239AG0	Inside steel rim
BLAZER	16	QLSL09E216AK0	Front wheel assembly(solid,12")
BLAZER	16-1	QLSJ04P207A0A	Solid tire only(12")(F/R)
BLAZER	17	QLSL09E205BK0	Steering arm spindle assembly(R)
BLAZER	19	QLSL09E119AK0	N/A
BLAZER	19-1	QLSL09E117AK0	Front bumper assembly
BLAZER	21	QLSL09E206AK0	Tie rod assembly(L/R)
BLAZER	22	QLSL09A205AG0	Steering tube and plate
BLAZER	25	QLSJ07P145B1G	Front and rear spring(Inside)
BLAZER	26	QLSK08P130A1G	Front and rear spring(Outside)
BLAZER	27	QLSJ07P534A3A	Spring holder
BLAZER	28	QLSL09E204AK0	Steering arm spindle assembly(L)
BLAZER	35	QLSL09E114AK0	Side bumper(L/R)
BLAZER	57	QLSK09P145BG0	Battery stopper
BLAZER	62	QL3051600190	Controller(PG S-120A)
BLAZER	75	QL3090432080	Cup bearing set
BLAZER	86	QLSJ04P129BG0	Battery fastener bracket
BLAZER	87	QLSE05A504A3A	Star knob(M8*45)
BLAZER	92	QLSG09E402AK0	Arm assembly(L)
BLAZER	92-1	QLWC09A409CA1	Arm pad(L/R)
BLAZER	93	QLWS34E006AK0-00	Seat assembly with swivel plate&slides
BLAZER	93-1	QLWS34E112AK0	Seat assembly only
BLAZER	93-1-1	QLWS34E113AK0	Head rest
BLAZER	93-1-2	QLWS34E201EK0	Hinge(L),angle-adjustable with handle
BLAZER	93-1-3	QLWS33E202FK0	Hinge(R)
BLAZER	93-2	QLSE06E407BK0	Slide assembly(L)
BLAZER	93-3	QLSE06E406BK0	Slide assembly(R)
BLAZER	93-4	QLSF03E412AK0	Seat swivel plate assembly
BLAZER	94	QLSG09E403AK0	Arm assembly(R)
BLAZER	95	QLSE01E402EK0	Seat post assembly
BLAZER	96	QLSL09E229AK0	Rear wheel assembly(air,12")(R)
BLAZER	96-1	QLSL09A231AG0	Rear hub(R)
BLAZER	96	QLSL09E233AK0	Rear wheel assembly(solid,12")(R)
BLAZER	97	QLZA15E106BK0	Drum brake assembly
BLAZER	98	QLSG03P172A3A	Drum brake mounting stopper
BLAZER	100	QLSL09A501B9D	Rear reflector with E-Mark(Red)
BLAZER	101	QLSL09P508B3A	Rear drivetrain cover
BLAZER	102	QLSL09E122AK0	N/A
BLAZER	102-1	QLRA12E109AK0	Transaxle assembly with motor and brake(800W:ZE-5895D24 19.75:1 6NM)
BLAZER	102-1-1	QLRA12A105BK0	Transaxle only(19.75:1)
BLAZER	102-1-2	QLRA12A304BK0	Motor only(ZE-5895D24:800W)(4 poles)
BLAZER	102-1-2-1	QL3051500100	Motor brush(ZE-5895D24:800W)
BLAZER	102-1-2-2	QL3051500140	Motor brush cap(ZE-5290/5895D24)
BLAZER	102-1-3	QLRA05A304CK0	EM brake only(24V 6NM)

BLAZER	102-1-4	QLRA05P137AG0	EM brake cover
BLAZER	102-1-5	QLRA05P115B3A	Coupling for transaxle
BLAZER	102-2	QLSH05P170BG0	EM brake extension handle
BLAZER	102-3	QLSG06P515A4B	EM Brake handle cover(Yellow)
BLAZER	102-4	QLSL09A116A1F	Rear bumper
BLAZER	102-5	QLSK09P508A3A	D-like tube plug
BLAZER	103	QLSL09E228AK0	Rear wheel assembly(air,12")(L) with speed sensing magnet
BLAZER	103-1	QLSL09A231AG0	Rear hub(L)
BLAZER	103-2	QLSK09A217B3A	speed sensing magnet
BLAZER	103	QLSL09E232AK0	Rear wheel assembly(solid,12")(L) with speed sensing magnet
BLAZER	106	QLSK09F608AK0	Speed sensor assembly with wire and connector
BLAZER	108	QLSF03F615AK0	Battery cable I
BLAZER	109	QLSF03F616AK0	Battery cable II
BLAZER	110	QLSL09F602AK0	Circuit breaker assembly with wire&connectors
BLAZER	111	QLSL09F607AK0	Harness assembly for turning lights
BLAZER	112	QLSL09F606AK0	Main harness assembly
BLAZER	112	QLSL09F611AK0	Main harness assembly-new version for stop lights
BLAZER	113	QL3052512090	Lead acid battery(12V50Ah)
BLAZER	114	QLSL09P801A2M	Anti-skid sticker(L) on the front deck
BLAZER	115	QLSL09P802A2M	Anti-skid sticker(R) on the front deck
BLAZER	121	QLSE06A510A3E	Key set(a pair)
BLAZER	122	QL3003700050	Rear mirror set(L&R)
BLAZER	123	QLZA15E201BK0	Manual brake handle assembly with braking light switch
BLAZER	124	QLSE07E505AK0	Mirror mounting bracket
BLAZER	125	QLSL09E201BK0	N/A
BLAZER	125-1	QLSK09A202AB4	Tiller delta handle
BLAZER	125-2	QLSE01A207BK0	Tiller shock
BLAZER	125-3	QLSF06A210B00	Cable for tiller shock
BLAZER	125-4	QLSF06P536A3A	Round tube plug
BLAZER	126	QLSL09E512AK0	N/A
BLAZER	126-1	QLSL09P514D25	Tiller front cover only(Purple 519C)
BLAZER	126-1	QLSL09P514D07	Tiller front cover only(White CoolGray1C)
BLAZER	126-1	QLSL09P514D18	Tiller front cover only(Green 354C)
BLAZER	126-1	QLSL09P514D01	Tiller front cover only(Red 207C)
BLAZER	126-2	QLSL09F610AK0	Dashboard assembly(LCD)
BLAZER	126-2-1	QLSL09H603AN9	LCD screen&PCB assembly
BLAZER	126-2-2	QLSK09P518A4P	Top cover for LCD screen
BLAZER	126-2-3	QLSK09P519AP2	soft keyboard
BLAZER	126-2-4	QLSK09H603AN9	Keyboard PCB
BLAZER	126-2-5	QLSF03F611AK0	Key switch
BLAZER	126-2	QLSL09F612AK0	Dashboard assembly(LCD)-new version for stop lights
BLAZER	126-2-1	QLSL09H605AN9	LCD screen&PCB assembly-new version for stop lights
BLAZER	126-3	QLSF03F613AK0	Turning light assembly(F)
BLAZER	126-4	QLSL09E509AK9	Tiller top cover assembly with driving light
BLAZER	126-5	QLSF06P514A4V	Headlight cover(R)(Yellow)
BLAZER	126-6	QLSF06P515A4V	Headlight cover(L)(Yellow)
BLAZER	126-7	QLSF06P516AG1	Headlight reflecting base(R)(Silver)
BLAZER	126-8	QLSF06P517AG1	Headlight reflecting base(R)(Silver)
BLAZER	127	QLSL09P240AG0	Spacing column
BLAZER	128	QLSB03P119HG0	Mounting bracket for front basket
BLAZER	130	QLSJ03E504A25	Cabinet basket(Purple 519C)
BLAZER	130	QLSJ03E504A07	Cabinet basket(White CoolGray1C)
BLAZER	130	QLSJ03E504A18	Cabinet basket(Green 354C)
BLAZER	130	QLSJ03E504A01	Cabinet basket(Red 207C)
BLAZER	130	QLSJ03E504A3A	Cabinet basket(All black)
BLAZER	130-1	QLSJ03P143AG0	Mounting plate on the cabinet basekt
BLAZER	131	QLSF03A225C00	Cable for manual brake
BLAZER	132	QLSF06P537A3A	Tiller boot
BLAZER	133	QLSL09E505AK4	Tiller rear cover assembly(Purple 519C)
BLAZER	133	QLSL09E505AK5	Tiller rear cover assembly(White CoolGray1C)
BLAZER	133	QLSL09E505AK1	Tiller rear cover assembly(Green 354C)
BLAZER	133	QLSL09E505AK6	Tiller rear cover assembly(Red 207C)
BLAZER	133-1	QLSL09P515B25	Tiller rear cover only(Purple 519C)
BLAZER	133-1	QLSL09P515B07	Tiller rear cover only(White CoolGray1C)
BLAZER	133-1	QLSL09P515B18	Tiller rear cover only(Green 354C)
BLAZER	133-1	QLSL09P515B01	Tiller rear cover only(Red 207C)
BLAZER	133-3	QLSK05F620AK4	USB Port
BLAZER	133-4	QLSF03F605AK0	Horn assembly in the tiller
BLAZER	133-5	QLSF03F604AK0	High-low switch
BLAZER	133-6	QLSF06F613CK0	Charging port on the tiller
BLAZER	134	QLSL09P522A3A	Plastic bracket for cup holders

BLAZER	137	QLSL09P521A3A	Tiller rear bottom cover
BLAZER	140	QLSJ05P507A3A	Cup holder(L)
BLAZER	142	QLSJ05P508A3A	Cup holder(R)
BLAZER	143	QLSK09F614AK0	Turning speed-down sensor assembly
BLAZER	143	QLSK09F615AK0	Turning speed-down sensor assembly-new version for stop lights
BLAZER	145	QLSG03F605AK0	Speed controll paddle assembly with potentiometer
BLAZER	N/A	QLEA01E903AK2	Charger(5A)