


Dealer Bulletin # DB2025-07

Bruno HD Arm Extension Kit


Fitting Instructions

Bruno HD Arm Extension Kit Fitting Instructions

To attach The Bruno HD arm extension kit:

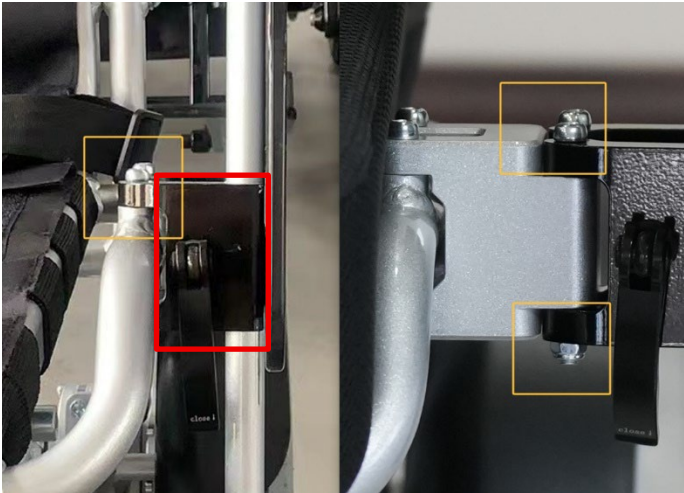

Loosen the screws and nuts marked in yellow and remove the black arm bracket marked in red.

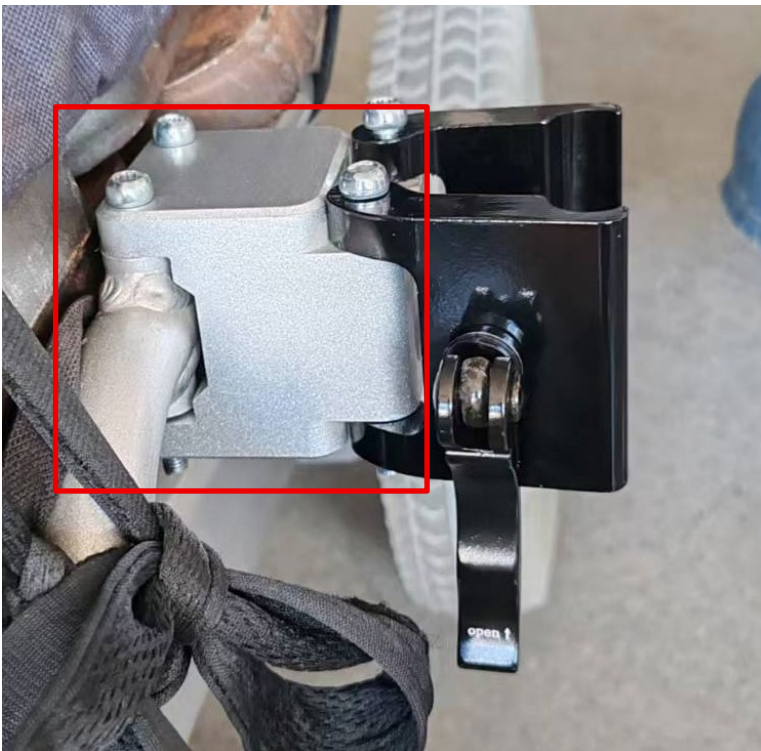

Fit the extension block to the position marked in red, and add the black bracket previously removed onto the extension and retighten the nuts and screws.