

Dealer Bulletin # DB2025-12

Roof Canopy Installation Instructions – Mustang Pro - Avenger Pro

Mustang PRO/Avenger PRO Canopy Installation Instructions

Please follow the instructions below on how to correctly install the canopy for the Mustang Pro, Avenger Pro & Blazer Pro.


1st – Bolt the silver telescopic slides to the frame.




Dealer Bulletin # DB2025-12

Roof Canopy Installation Instructions – Mustang Pro - Avenger Pro

Make sure the strut inserts into the bracket in the middle of the roof bar

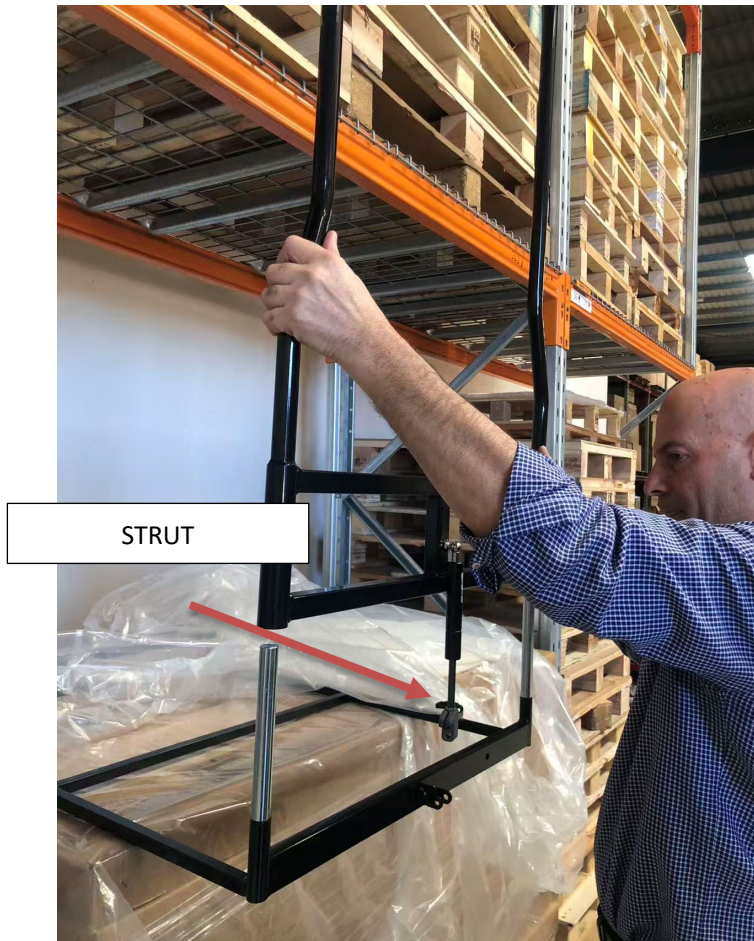

Secure the strut with a bolt and nut supplied with the canopy

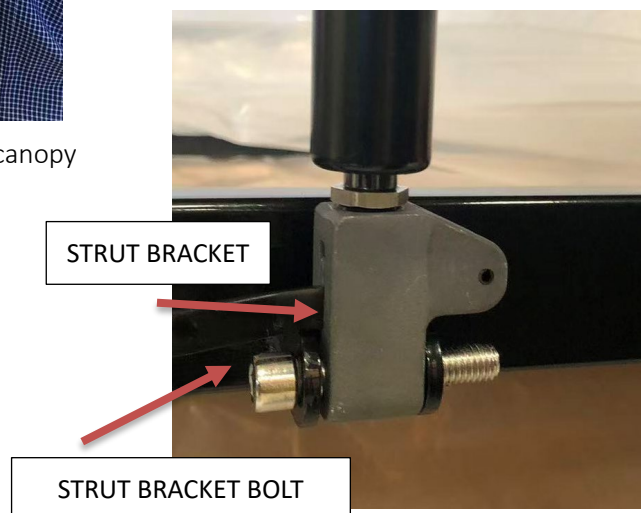

Dealer Bulletin # DB2025-12

Roof Canopy Installation Instructions – Mustang Pro - Avenger Pro

It will look like this image once you have followed the above steps.



This will allow the canopy frame to move up and down once the strut is connected, you may need a little grease to apply to telescopic slides to help with the sliding. There's already grease inside telescopic slide sleeve, but you may need to apply more if needed.

Dealer Bulletin # DB2025-12

Roof Canopy Installation Instructions – Mustang Pro - Avenger Pro

Flip the canopy up the right and secure it to the scooter.

To do this you will need the two brackets that are shown in the following image, and you will need to bolt them onto the scooter seat frame (see below).



Attached the canopy onto the brackets like in the image below.

