







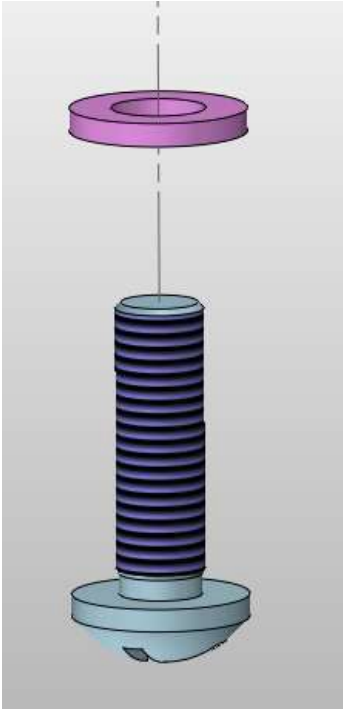


M6 X 20

5 sets

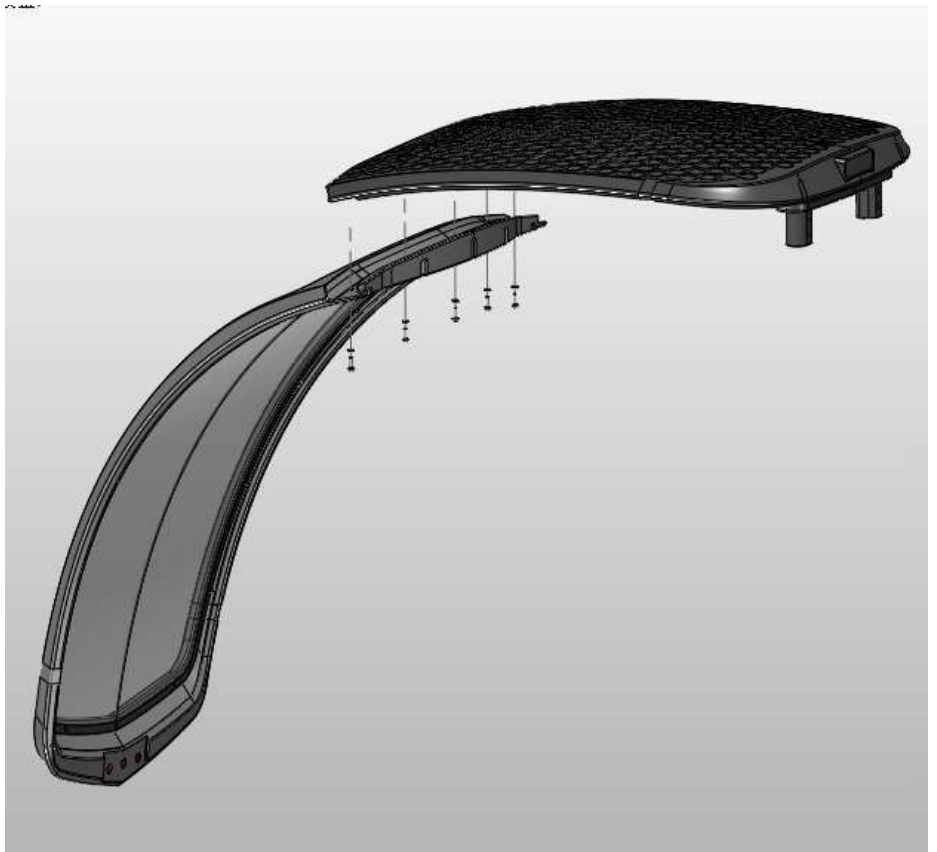

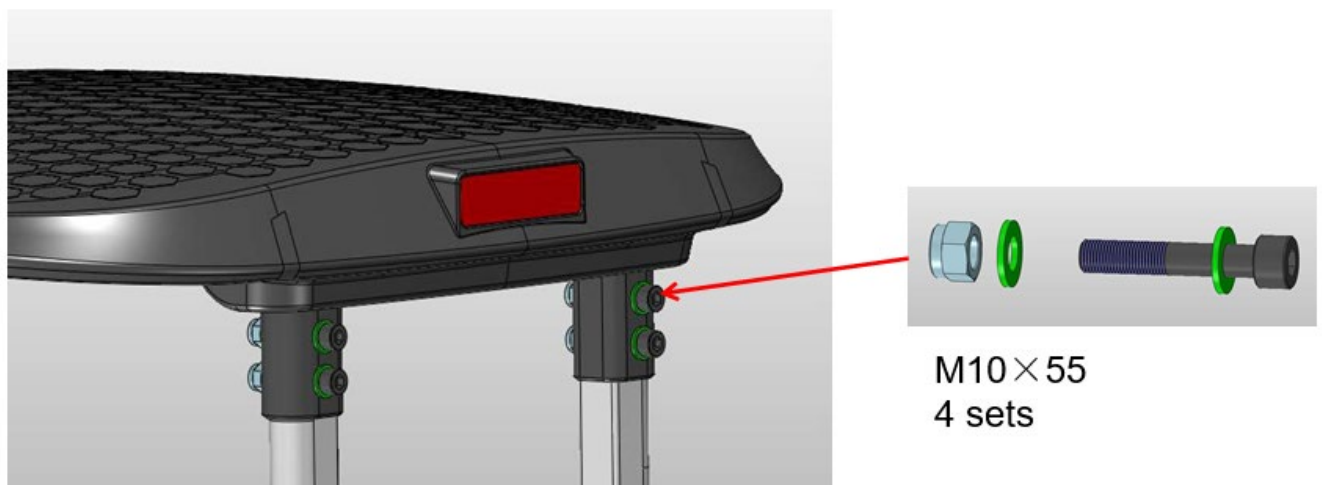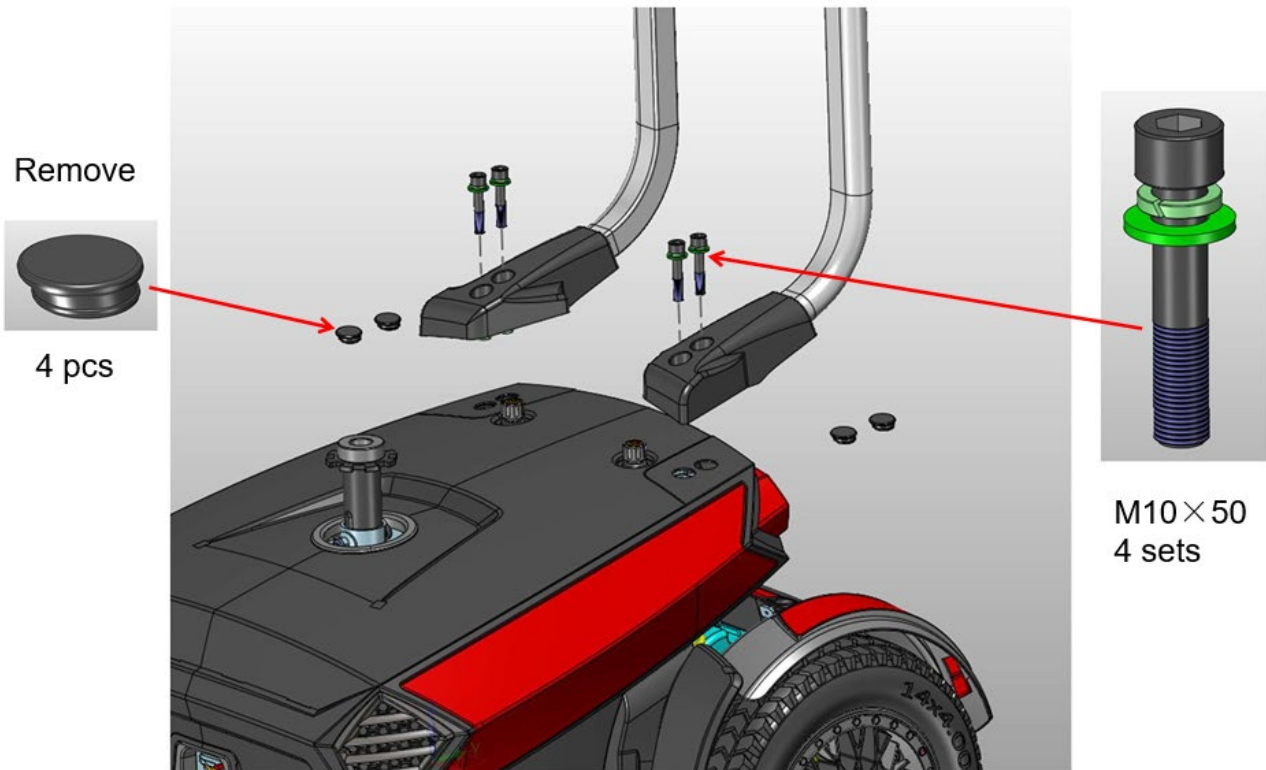

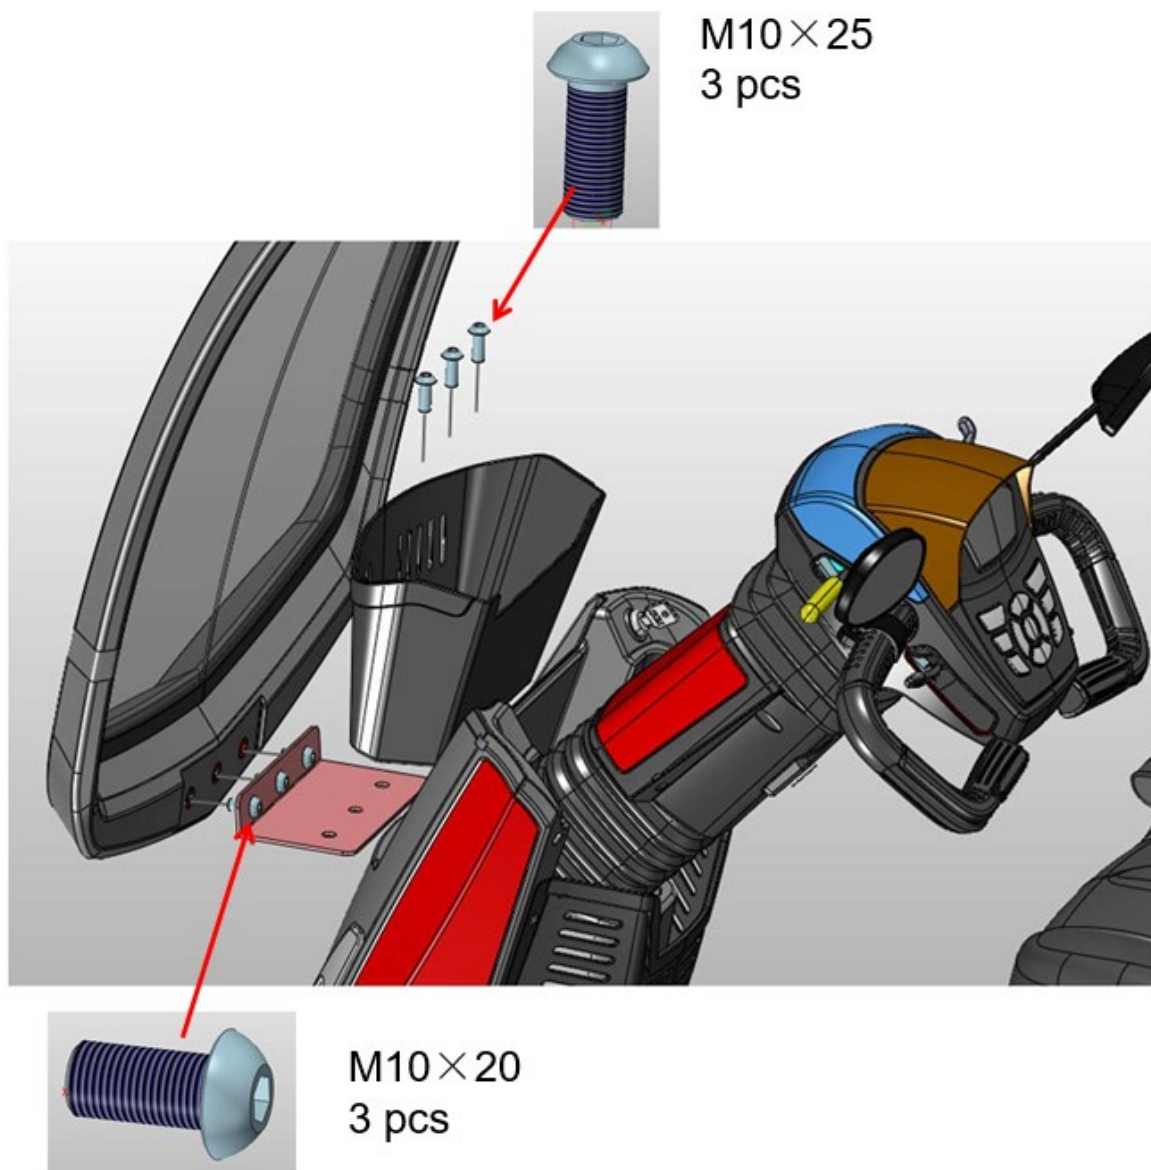

BASIC STEP BY STEP INSTRUCTIONS

- Remove front basket first.
- Bolt front bracket to windscreen. Tighten bolts.
- Bolt roof & windscreen together. Hardest job! Tighten bolts.
- Bolt rear uprights to rear of scooter. Don't tighten.
- Plenty clearance to swivel seat when no accessories fitted.
- Fit canopy to rear uprights. Don't tighten.
- Bolt front basket back down through front canopy bracket. Tighten bolts.
- Tighten all other bolts.