


Dealer Service Bulletin #148

Battery Terminal Issue - GoLite

SOP for Insulation Pad

- 1) Turn the battery off on the battery using the ON/OFF switch.
- 2) Remove Battery from GoLite.
- 3) Lay the GoLite down on its side.
- 4) Find the control unit for the GoLite and apply the insulation pads onto the metal case for the control unit.
(See photo below showing insulation pad application points)

(Note: While installing, it is ESSENTIAL to ensure the bolts/terminals squared in red don't touch metal).

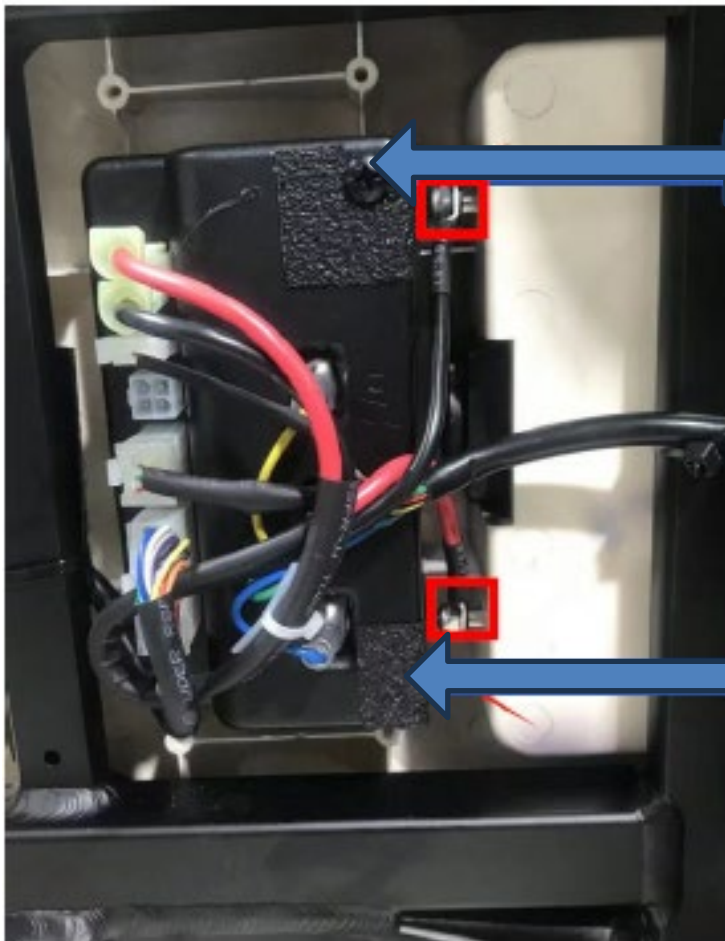

Insulation pad to be applied here.

Insulation pad to be applied here.



Bolt from Battery



Bolt from Battery