

Dealer Service Bulletin #DSB163

Mustang Pro – Scooter Won't Turn On

This procedure should only be carried out by qualified personnel or authorised service agents. Disconnecting the immobiliser may disable key features and should only be done if the MUSTANG PRO is showing the following symptoms:

Key symptoms to look out for:


- The remote does not turn on the scooter - When you press the unlock button on the remote, the blue light shows on the scooter push start button, but nothing else works on the scooter.
- When the push start button is pressed it doesn't turn the scooter on and the blue light doesn't show up.

How to disconnect the immobiliser step by step.

1. Remove the rear tiller cover from the scooter, below are the points in which you will need to remove screws.





2. Remove the pink wire plug. This wire stays unplugged.

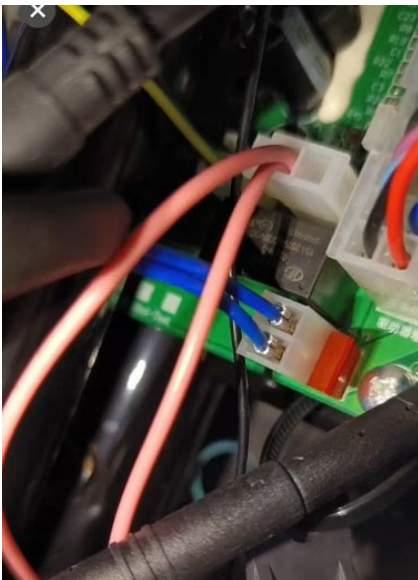


Dealer Service Bulletin #DSB163

Mustang Pro – Scooter Won't Turn On

3. Unplug the green and yellow wire plug gently. (Noting the female side of this connector will stay unplugged)

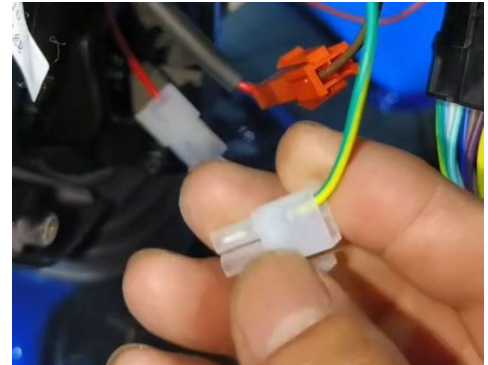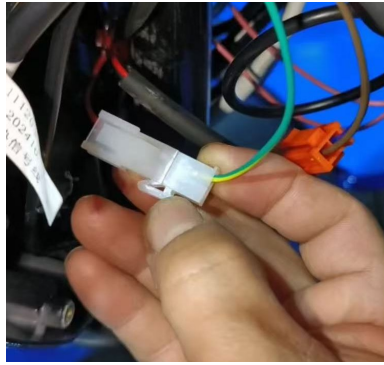


4. Change the green and yellow wire to the other side of the plug. You will need a pick to do this. See image below.

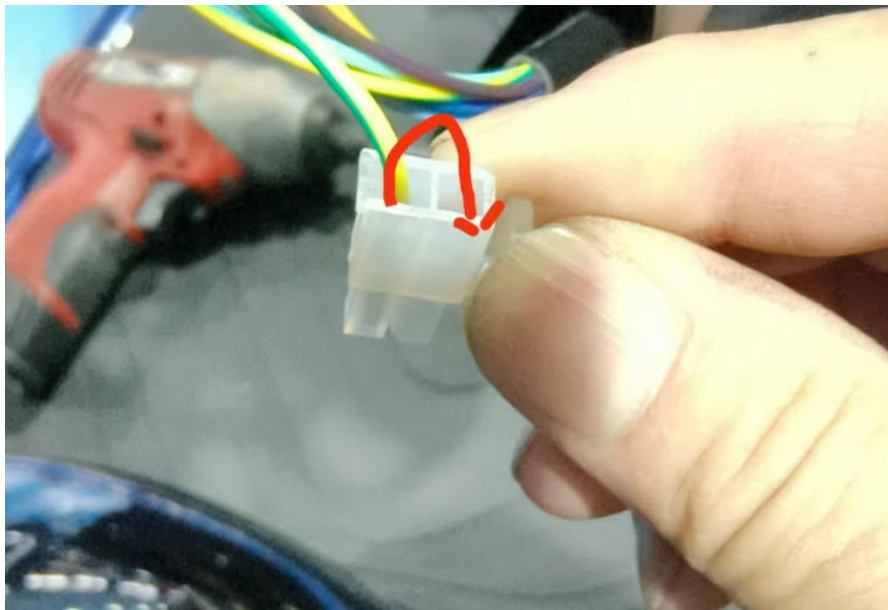

Dealer Service Bulletin #DSB163

Mustang Pro – Scooter Won't Turn On

5. Plug the green and yellow wire back into where you removed the first pink wire connector.

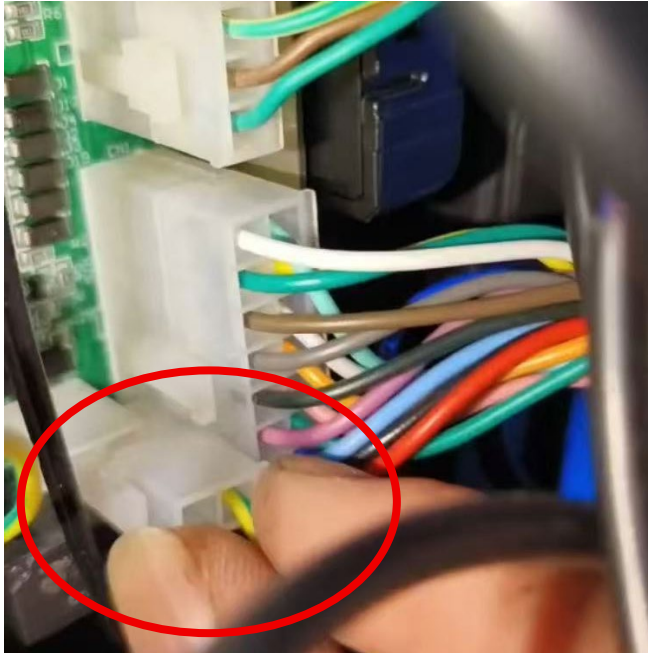

6. Reattach the tiller and turn the scooter on.