



USER MANUAL



Sensor Light (Portable) [EG0018]

Copyright Zoom Mobility
User Manual Booklet 2025



Please read the instructions carefully before using this product.
This product, accessories, user interface, and other illustrations in the manual are schematic diagrams for reference only. Due to product updates and upgrades, there may be slight discrepancies between the actual product and the schematic diagram. Please refer to the actual product for accuracy.

Preface

- a. Open the package and take out the product and all components.
- b. Check each part carefully before use. If anything becomes broken, do not use.
- c. Keep these instructions in a safe place for future reference.

Product Introduction

360 degree rotation.

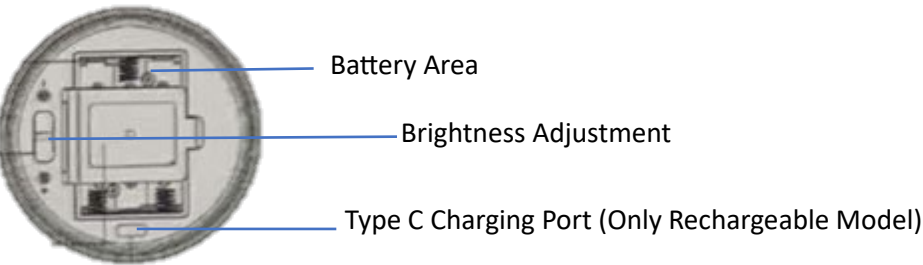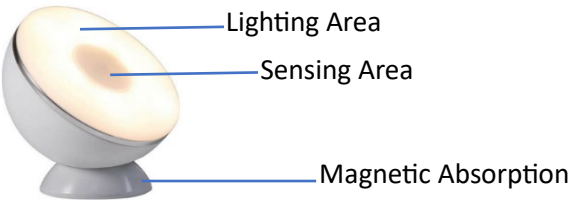

- 1. Dry Battery Model: Size 7 battery x 3.
- 2. Rechargeable Model: Built in battery.

Instructions For Use

- 1. **Install the battery.**
Rotate counterclockwise to separate the back of the shell of the hemisphere, following the positive and negative pole instructions, insert 3 AA batteries. (The rechargeable model has a built-in lithium battery, no need to install additional batteries).
- 2. **Power Description**
The dry battery model can be replaced with new AA batteries, and the rechargeable model can be charged using USB type-C.
- 3. **Button Description**
This product defaults to the intelligent human body sensing mode, +increase brightness /- decrease brightness.
- 4. **Wall Mounted Use**
Choose a flat and dry adhesive position, wipe it clean, tear off the back adhesive of the base, press firmly to make it stick, and finally place the lamp body on the magnetic suction base and adjust it to the appropriate angle.
- 5. **Sensing Explanation**
When detecting human activity in a dimly lit environment, the sensing light will automatically light up and turn off after 20 seconds of not being able to sense human activity.

Tip:
The detection range is a 120-degree fan-shaped area centred on the sensing area. The sensing effect is affected by the angle of the light, ambient temperature, ambient lighting, human body shape, and movement speed, with 0-4m in front and 0-2m on the side.

Human Body Sensor Rotating Night Light	
DRY BATTERY MODEL	
Power Supply method:	Size 7 battery x 3
Brightness Level:	4-Level Brightness Adjustment
Rated Voltage:	4.5V
Rated Power:	0.3W
Sensing Distance:	0-4m
Delayed Shutdown	20s
Colour Temperature	2700 – 3200k

Warning!

- The surface sensing area of the product is prohibited from being covered.
- Avoid installing near heat sources, such as air conditioning vents, heating vents, etc., avoid installing in locations with drastic humidity changes such as humidifiers, and avoid installing in locations with strong direct sunlight.
- After normal use for a period of time, if the brightness of the night light decreases or the working status is abnormal, it may be due to low battery power. Please replace the battery.
- Can only be used indoors.

Warranty

One-Year Warranty

Your Zoom Mobility product is fully guaranteed for one (1) year from the date of purchase against faults arising due to defects in manufacture or materials. This warranty does not detract from but is in addition to your legal rights.

Not Covered Under Warranty

The guarantee does not extend to those items which may need replacement due to normal wear and tear or damage to the product caused by misuse or accident for which Zoom Mobility or its agent cannot be held responsible. This warranty does not include service calls.

Transport/Call Out costs

As the owner you must bear the cost of transporting the unit to the retailer or should you decide to have the retailer come to you, you must bear the cost of the retailers call out fee. Your retailer may choose to waive this cost, but this will be at the retailers discretion only and separate to Zoom Mobility's warranty terms and conditions.